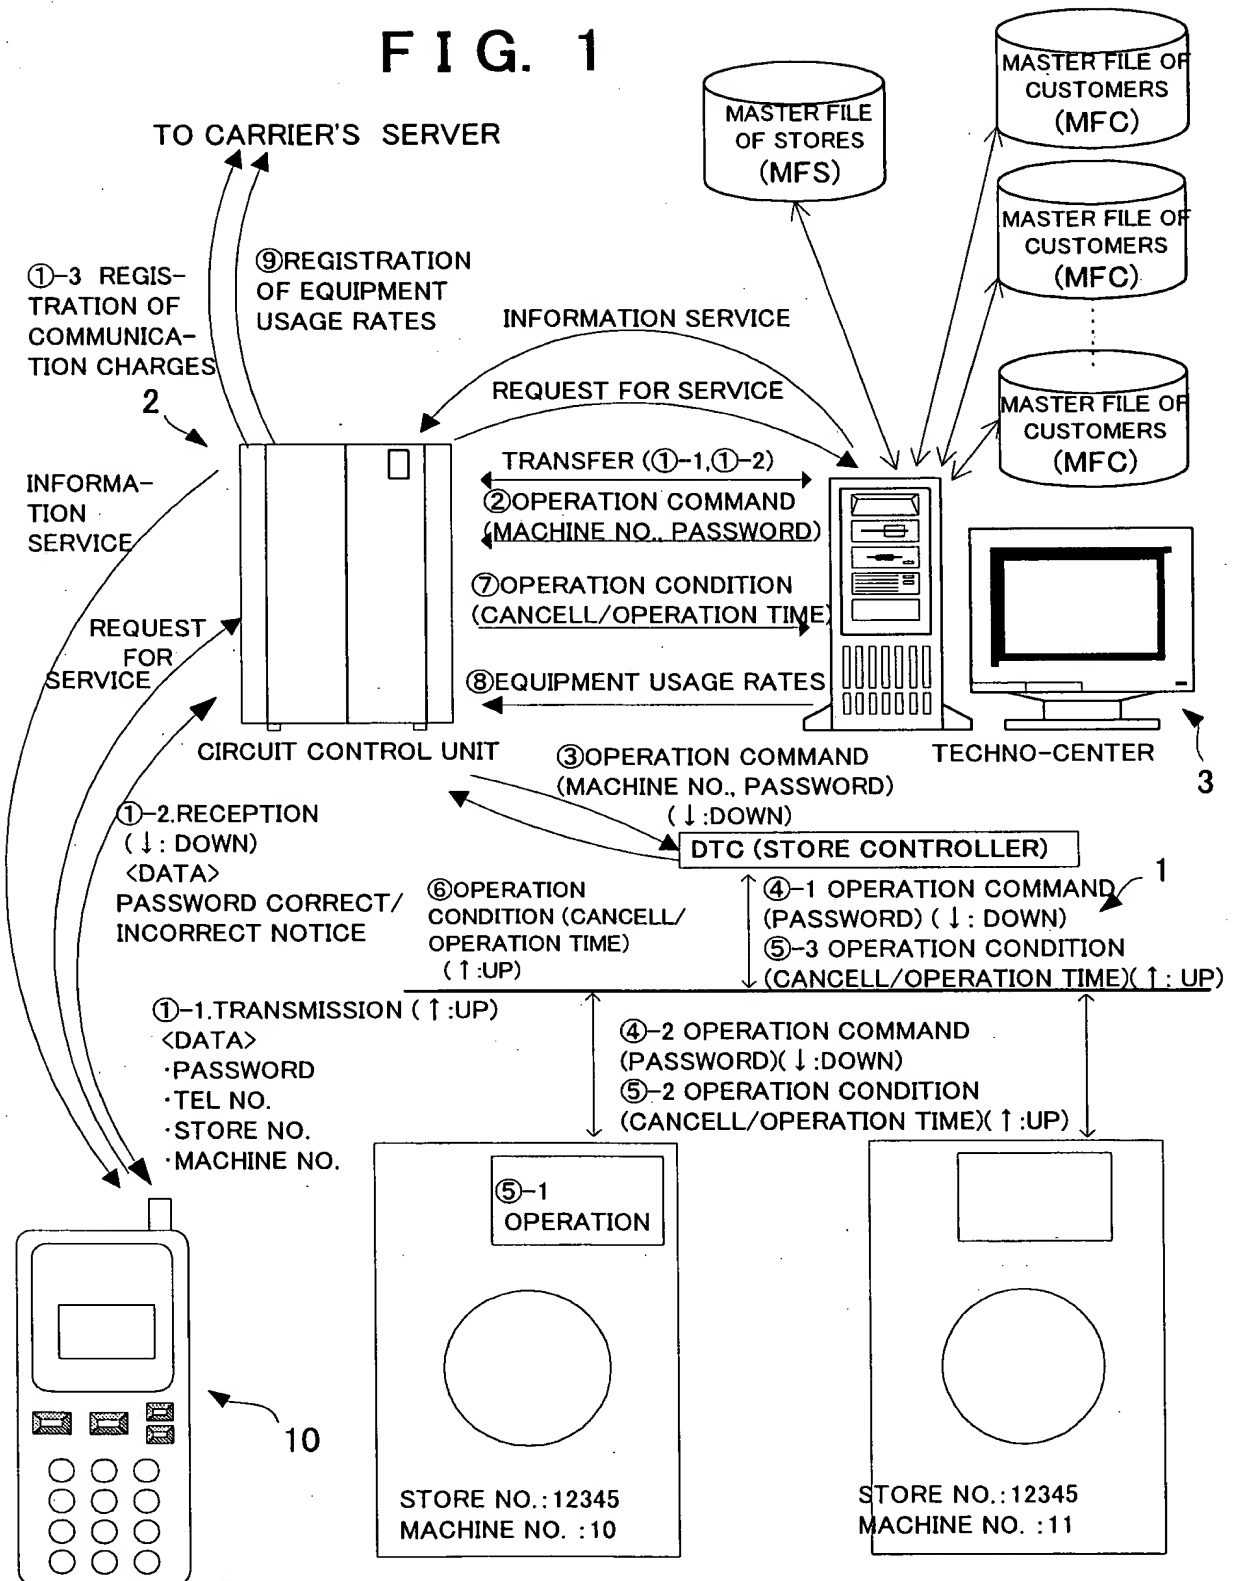 


FIG. 1



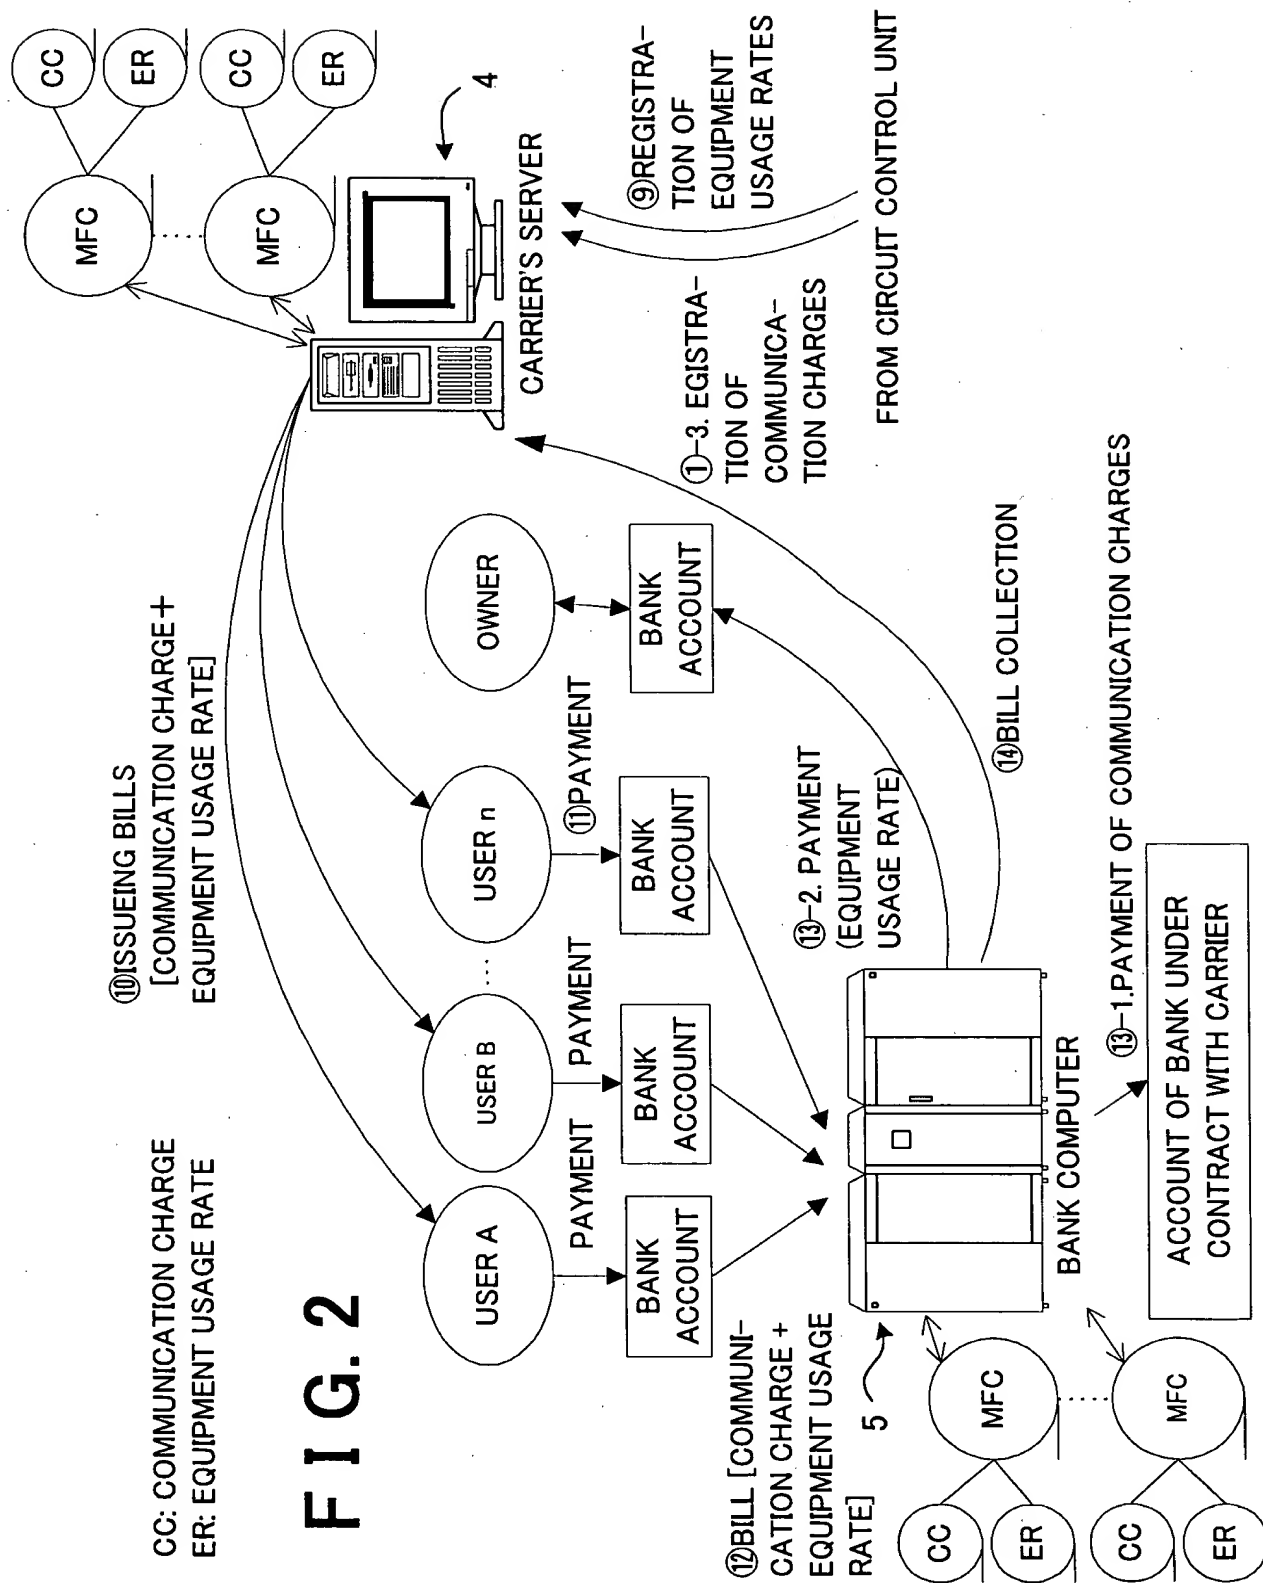 


FIG. 3


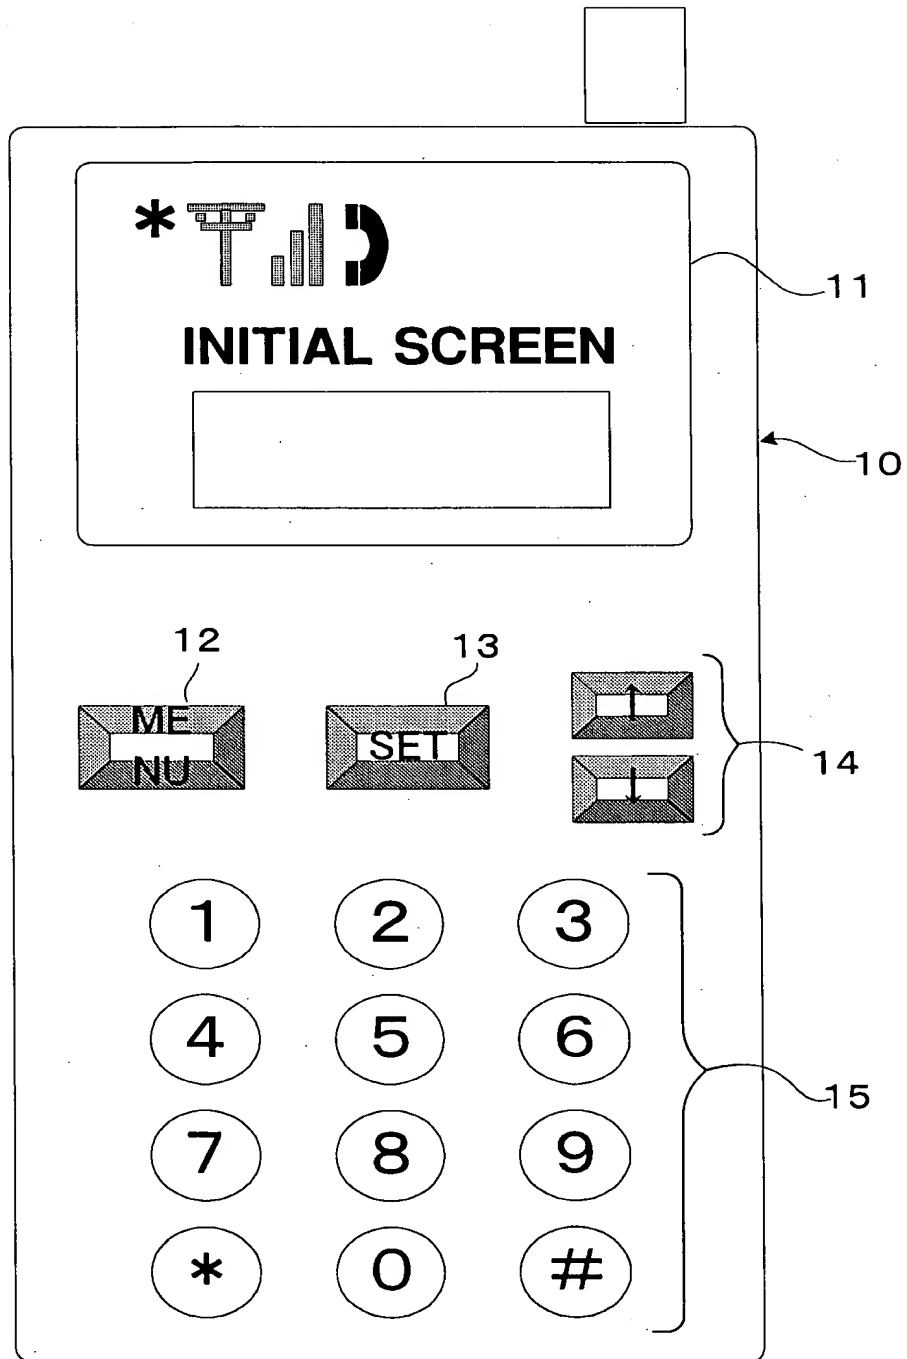 



FIG. 4

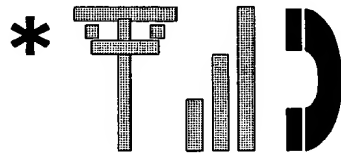 

Mobile Menu

- 1 NEWS/INFORMATION
- 2 MOBILE BANKING
- 3 TRAVEL
- 4 SHOPPING
- 5 LAUNDRY
- 6 OTHERS
- 7 QUIT MENU

 FIG. 5

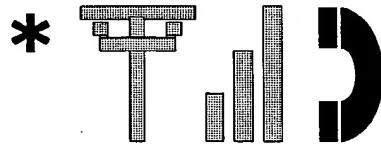

**LAUNDRY MOBILE
MENU**

INPUT YOUR PASSWORD

YOUR PASSWORD:

1234

CONFIRM PASSWORD AND
PRESS DETERMINATION KEY

FIG. 5

B




1 USE LAUNDRY

2. OTHER INFORMATION SERVICE

2. OTHER INFORMATION SERVICE

 FIG. 7

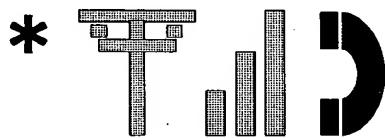

USE LAUNDRY

INPUT LAUNDRY STORE No.


(DELIVERED TO YOU IN ADVANCE., ALSO INDICATED
ON MACHINE OPERATION PART)

LAUNDRY STORE No. :

12345

**CONFIRM STORE No. AND
PRESS DETERMINATION KEY**

 
FIG. 8

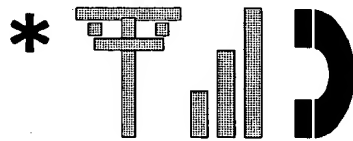

USE LAUNDRY


INPUT MACHINE NUMBER
YOU USE

(REFER TO INDICATION ON MACHINE
OPERATION PART)

MACHINE NO. : 

CONFIRM MACHINE NUMBER AND
PRESS DETERMINATION KEY

 FIG. 9

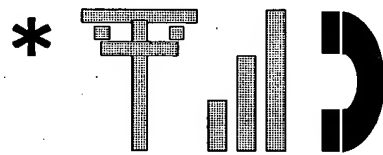


USE LAUNDRY

WHEN READY-TO-DRIVE
LAMP STARTS FLASHING,
LOAD YOUR LAUNDRY AND
PRESS START BUTTON.

THANK YOU.

 FIG. 10

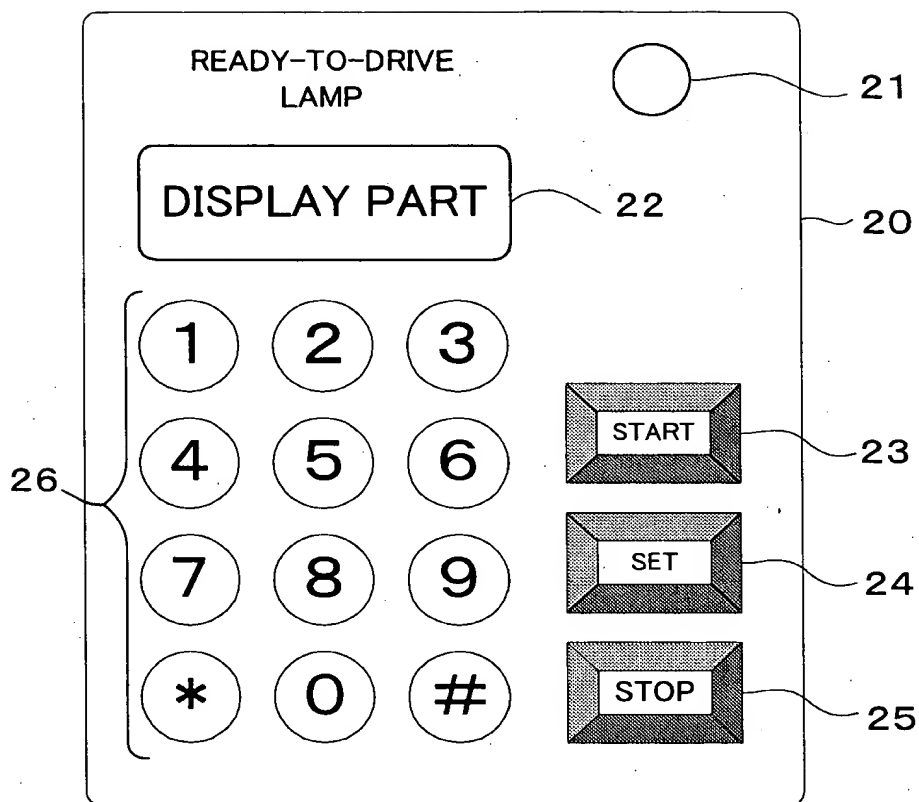

OPERATION PART (DRYER)

FIG. 11


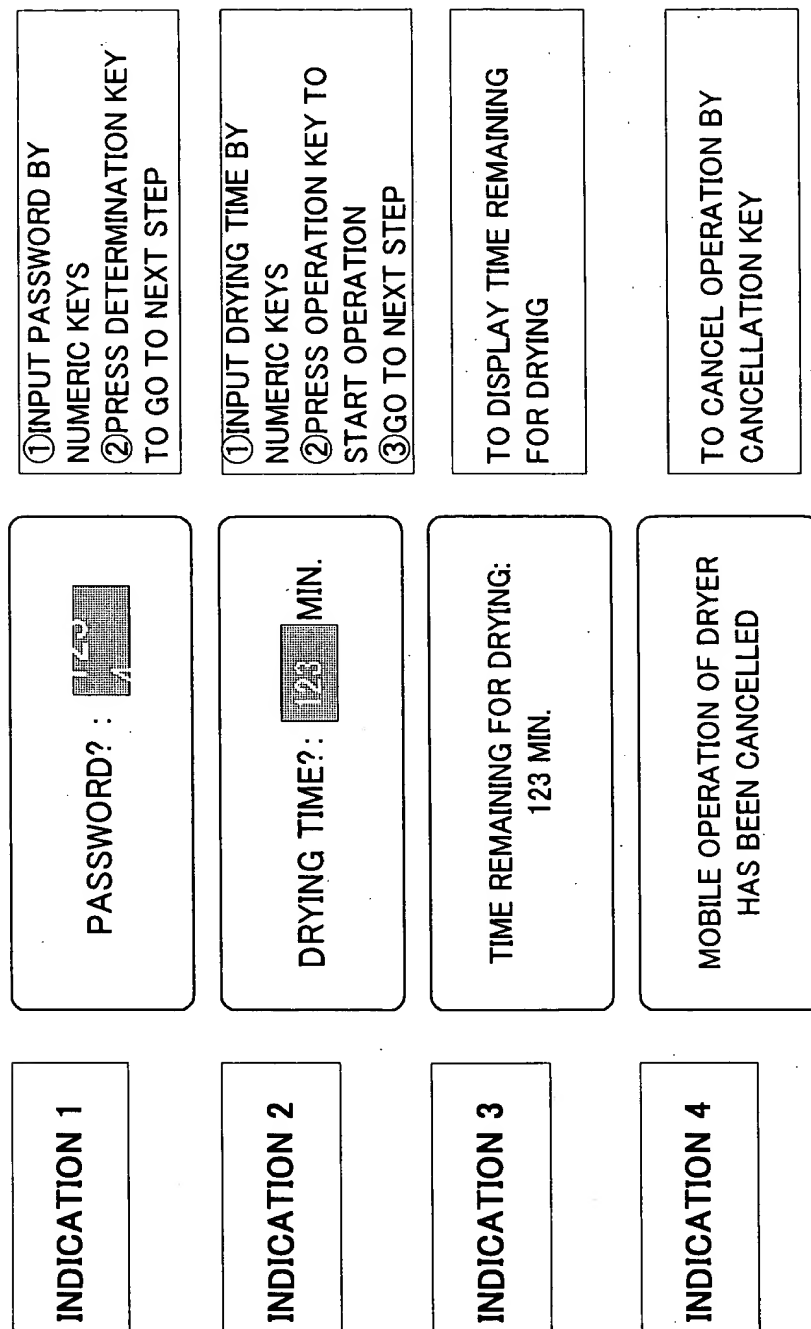 


FIG. 12

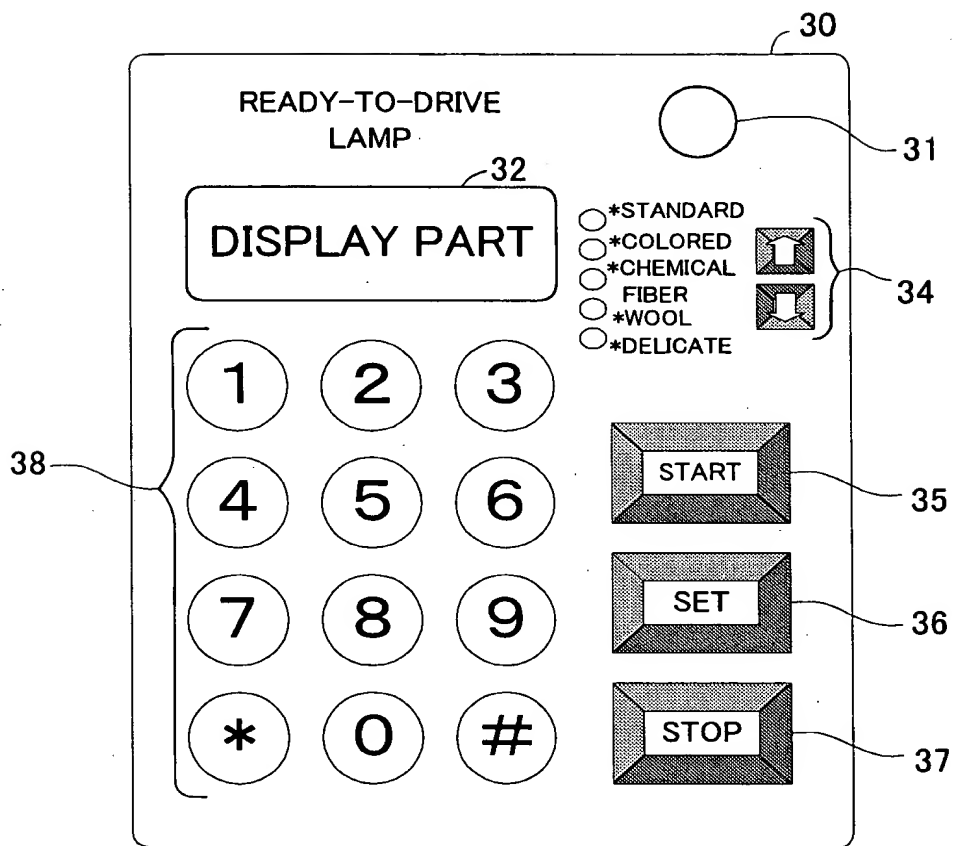 

OPERATION PART (WASHING MACHINE)

FIG. 13

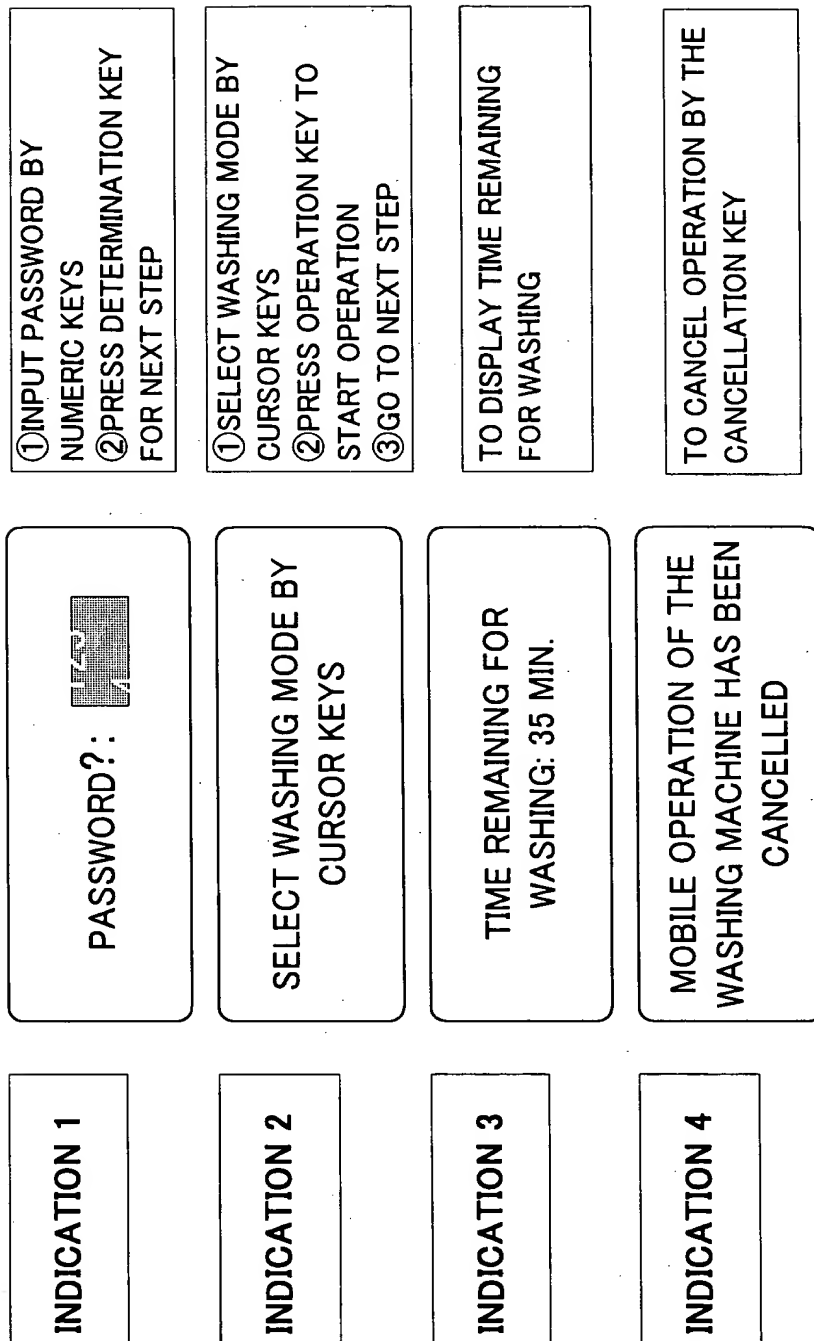 


FIG. 15A

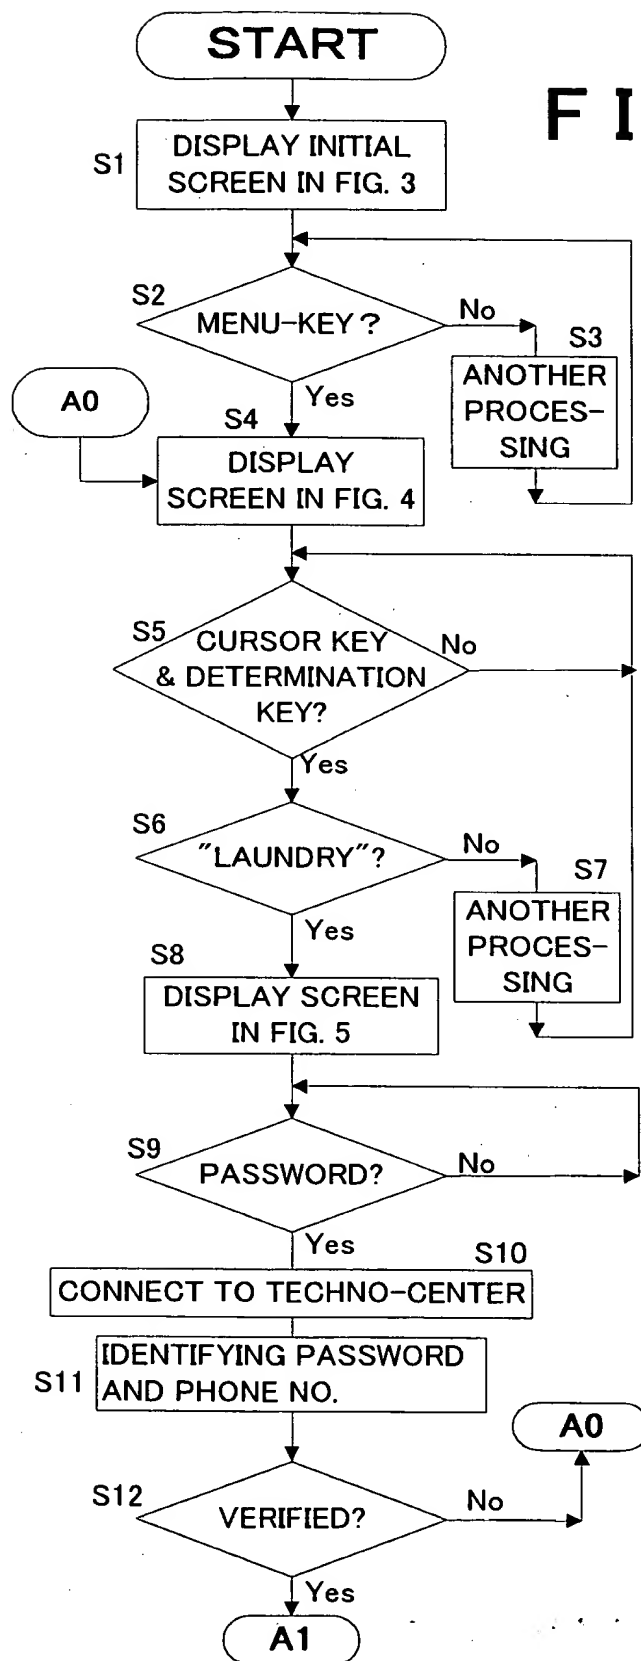 


FIG. 15B


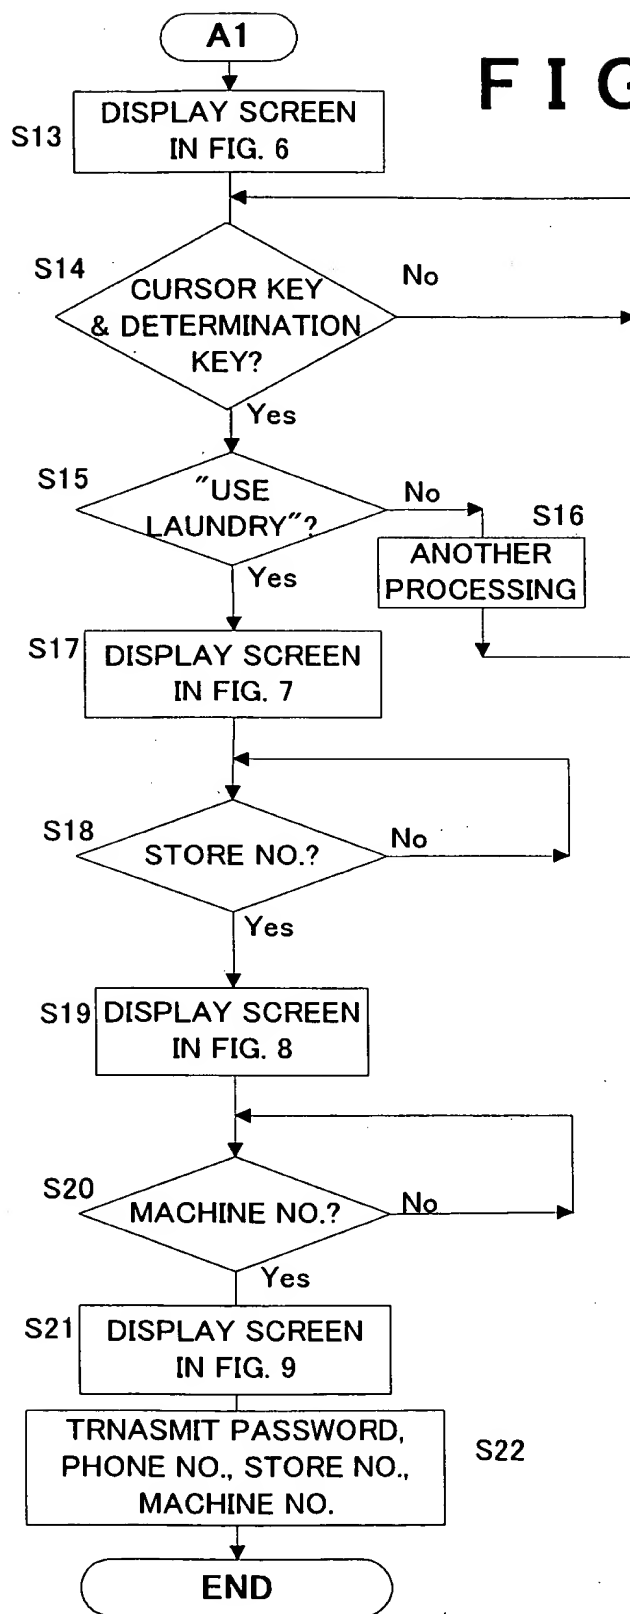 


FIG. 16

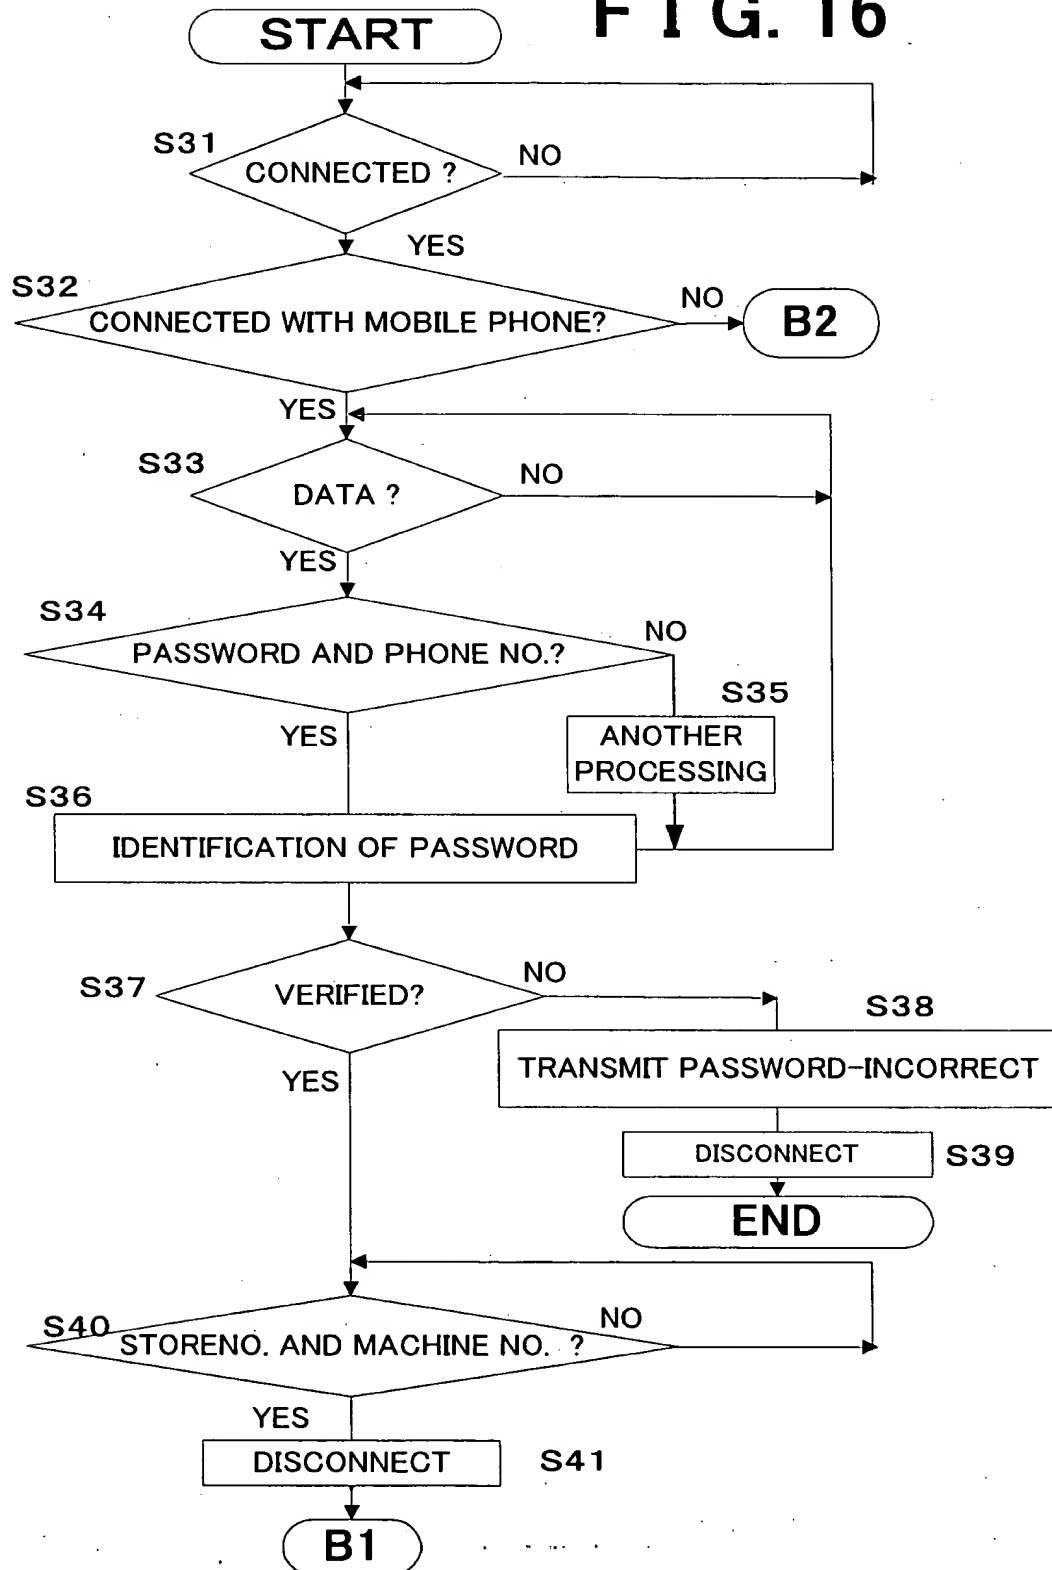 

09824840-032004
T00000-032004

FIG. 17A

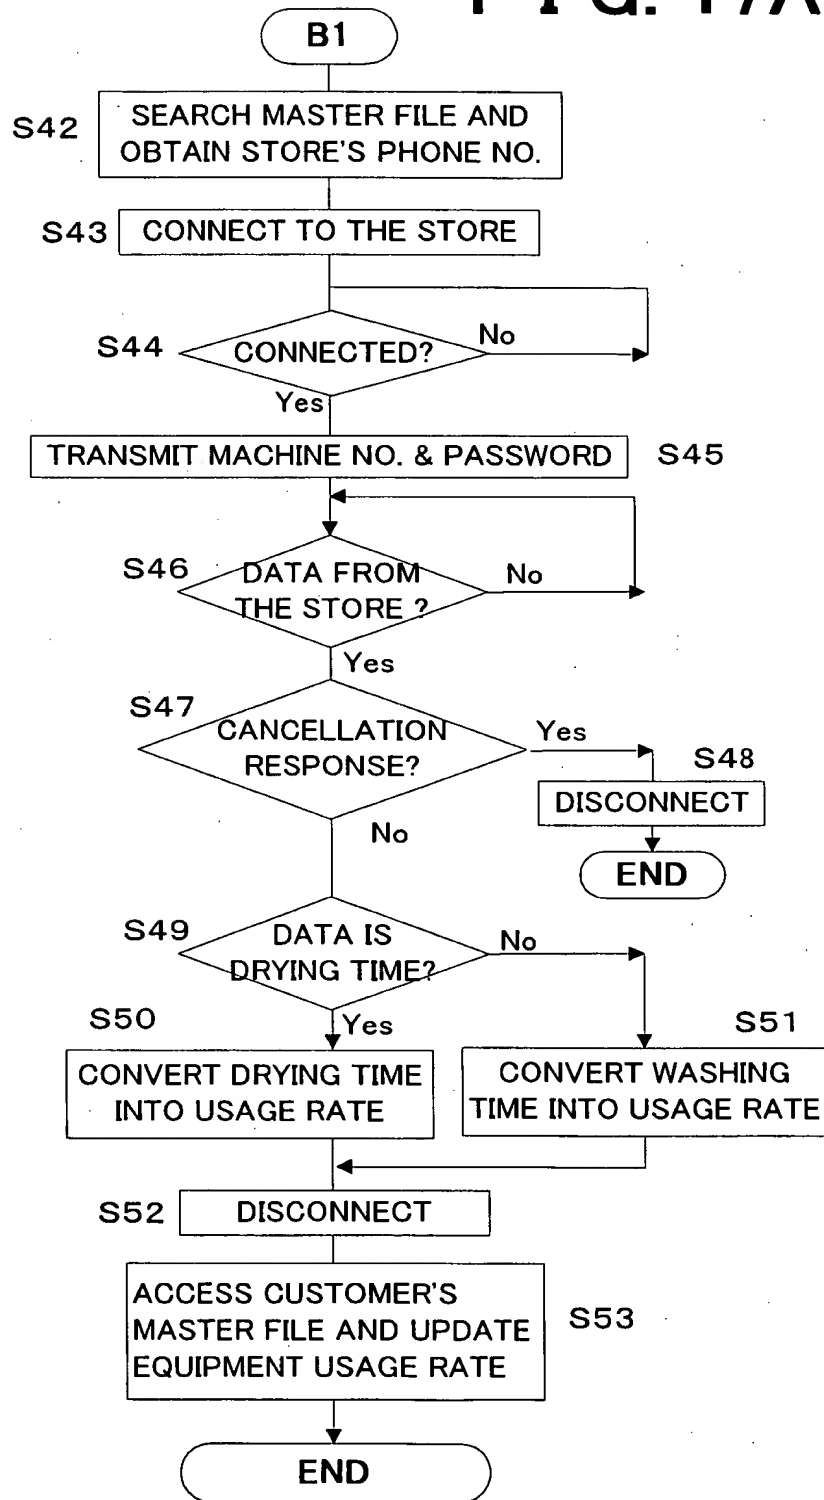 


FIG. 17B

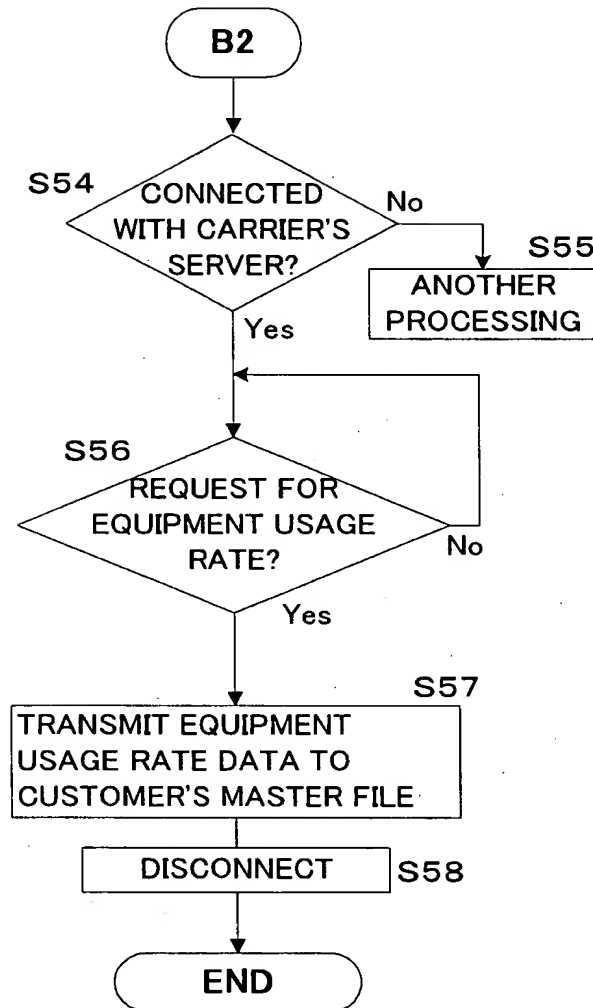 


FIG. 17B

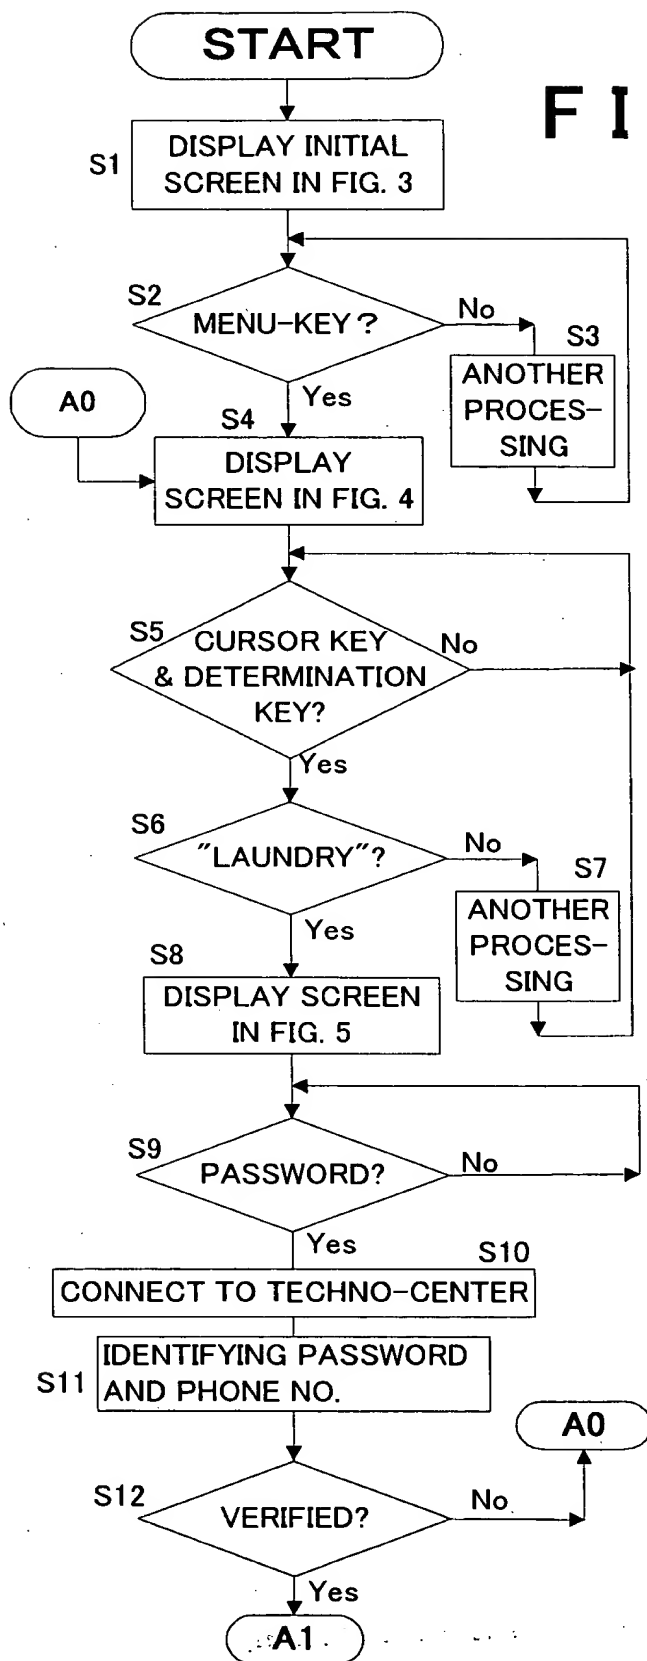 


FIG. 18A

FIG. 18B


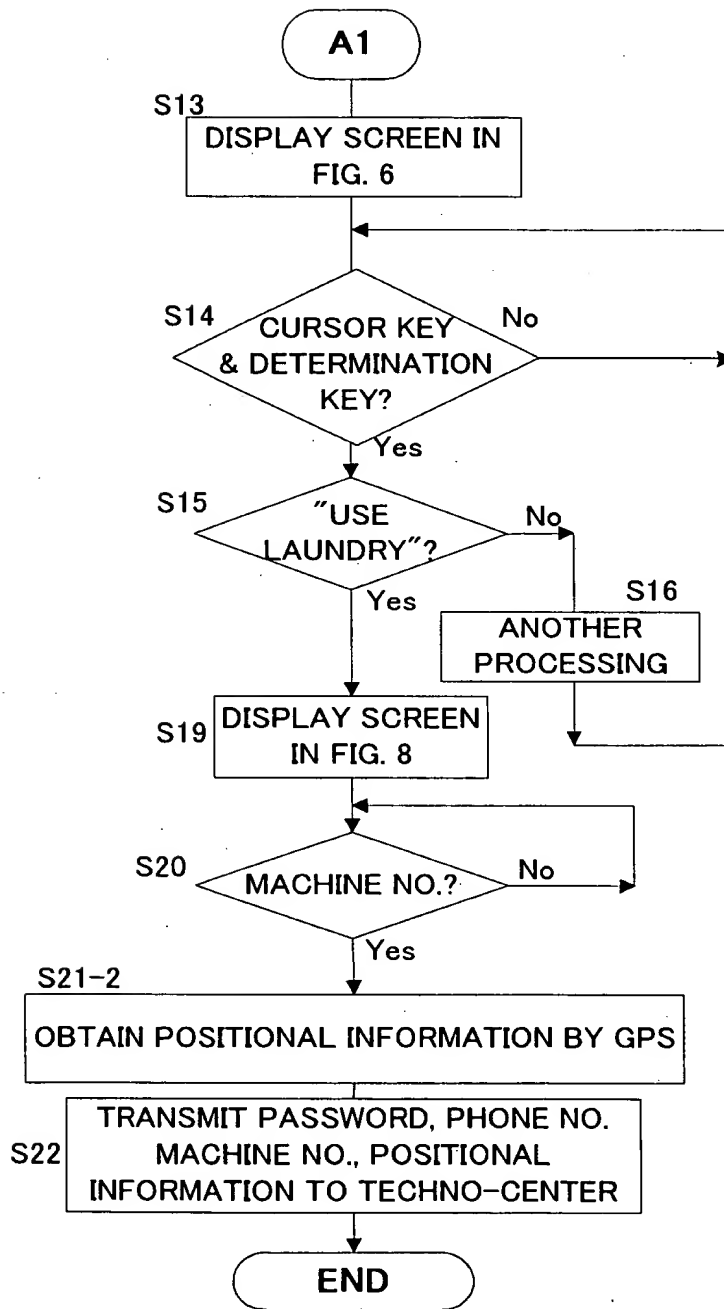 


FIG. 19

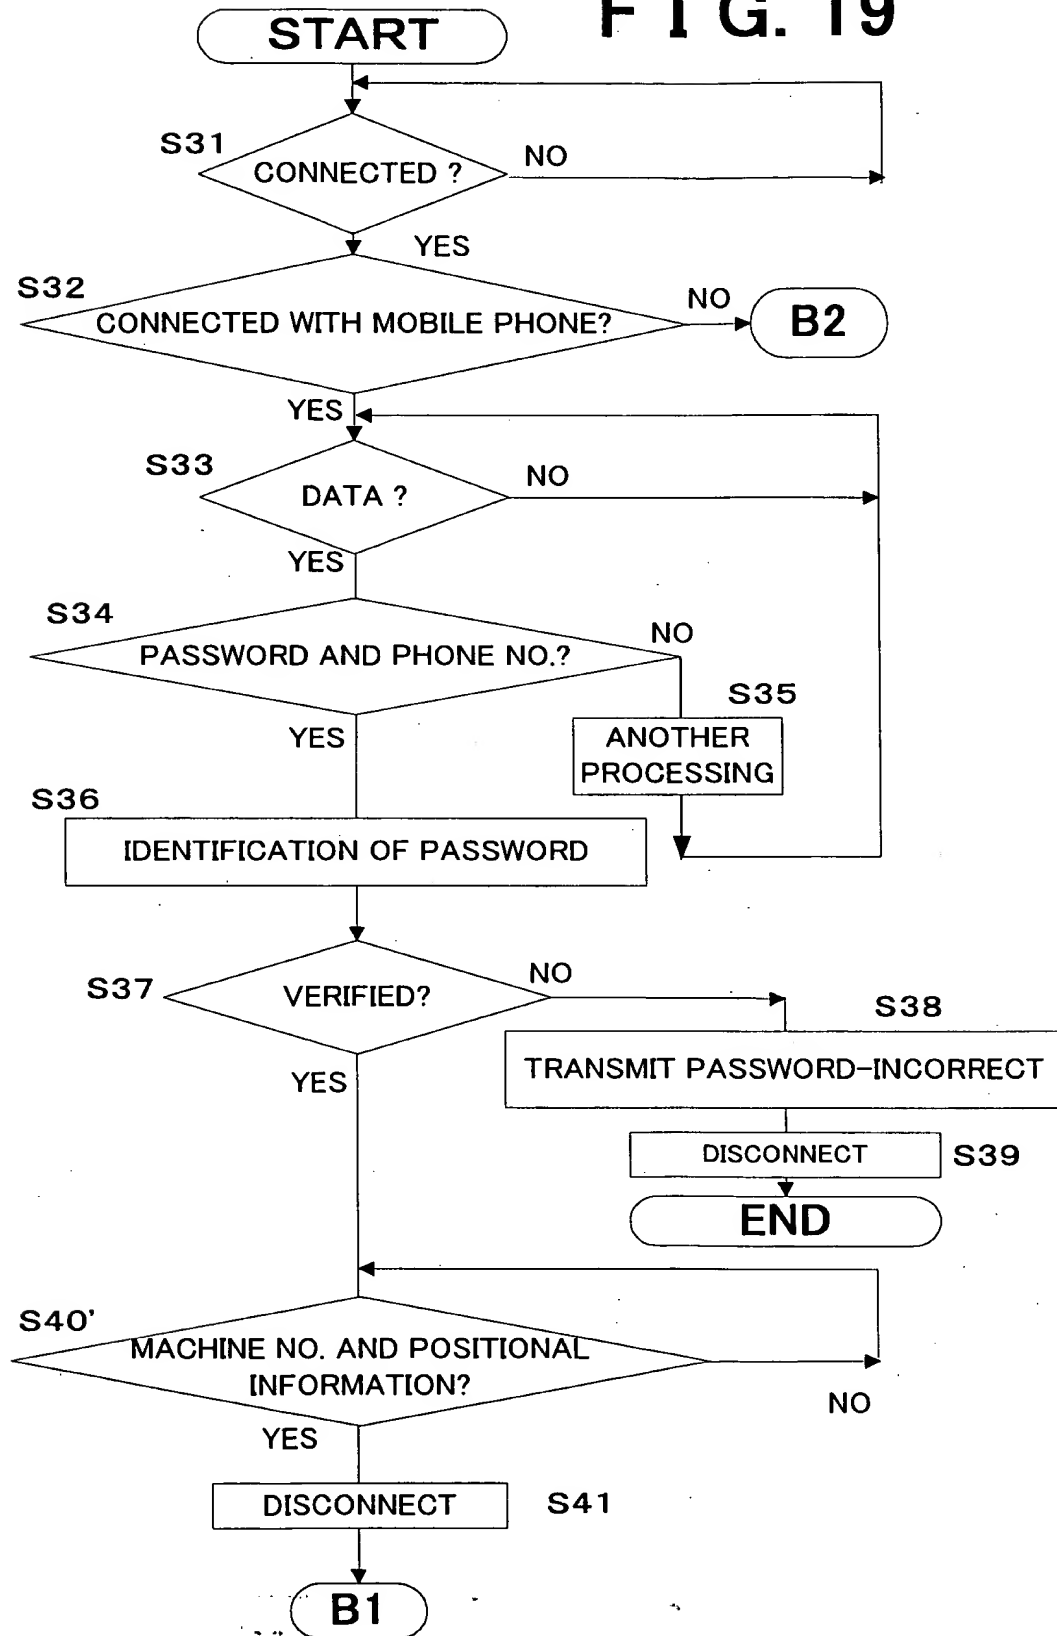 

[illegible]

<MASTER FILE OF STORES>

FIG. 22

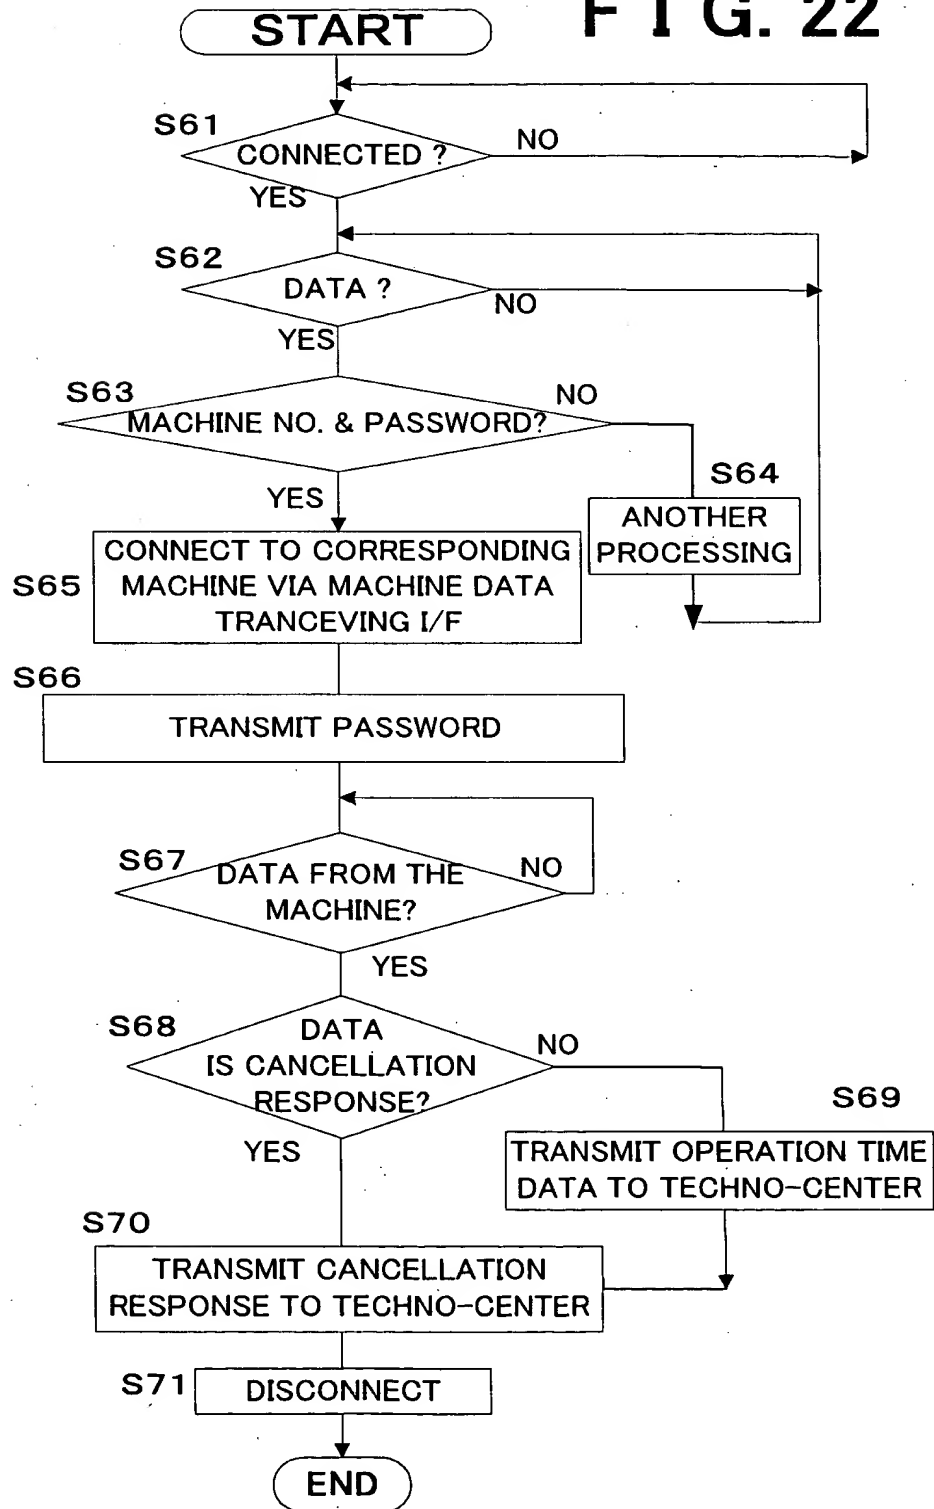 


FIG. 23

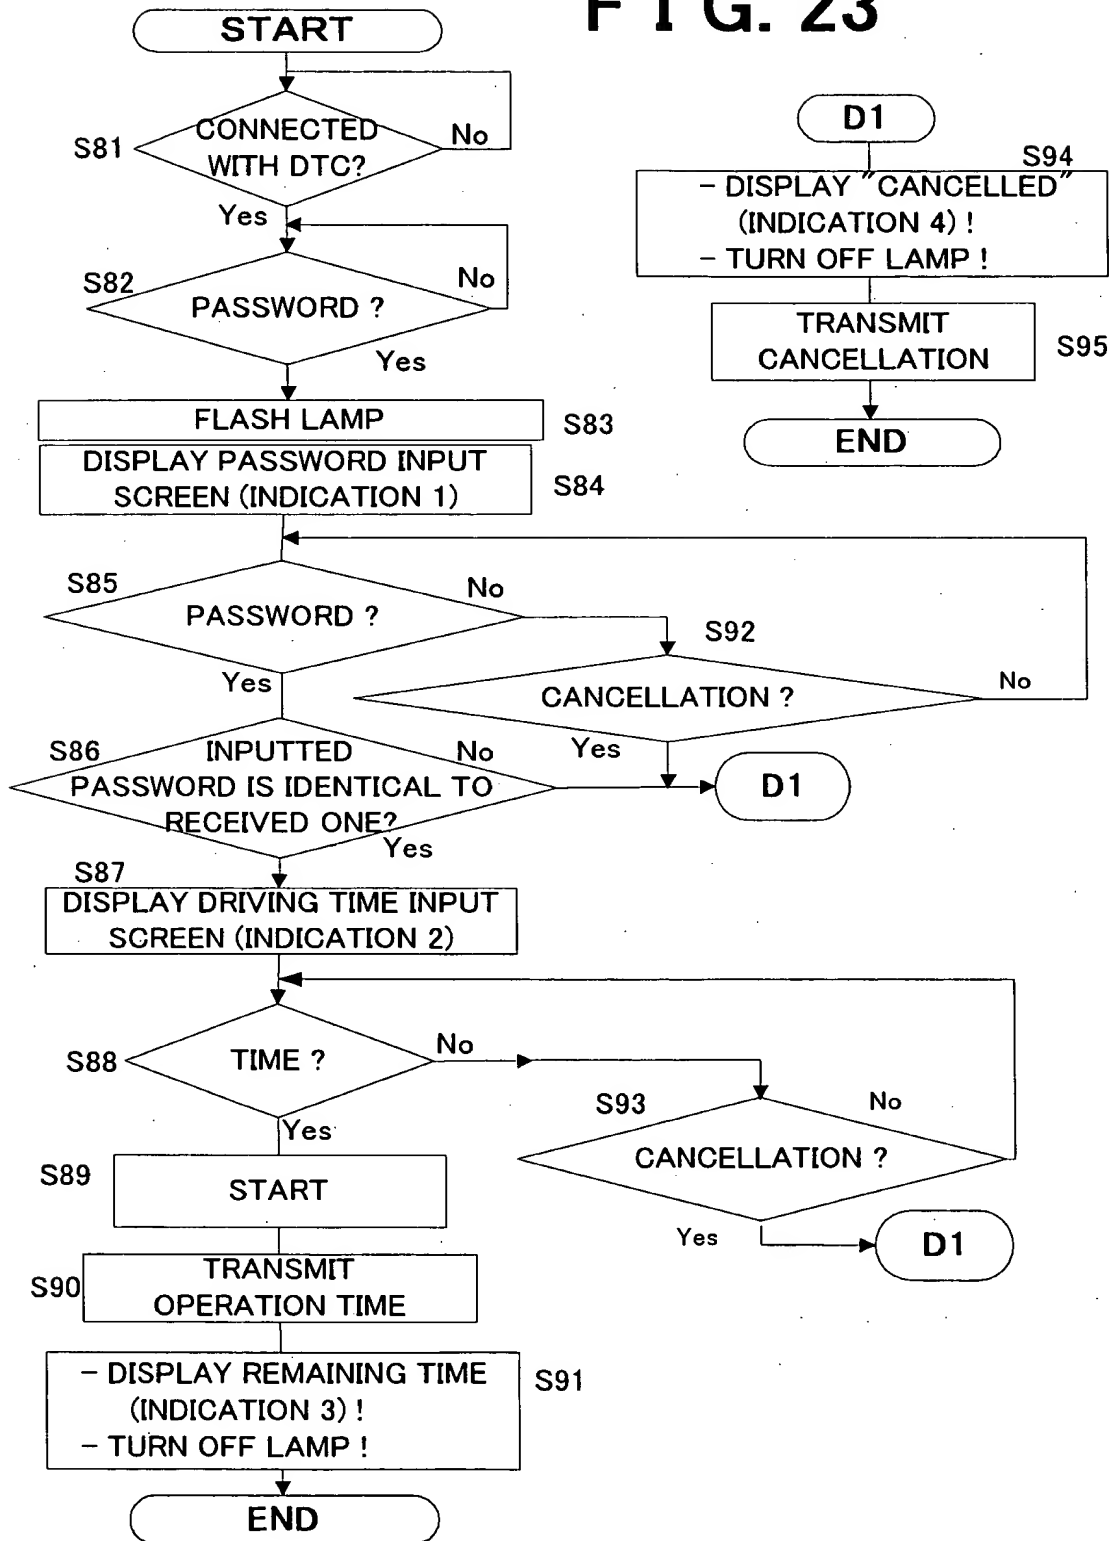 


FIG. 24

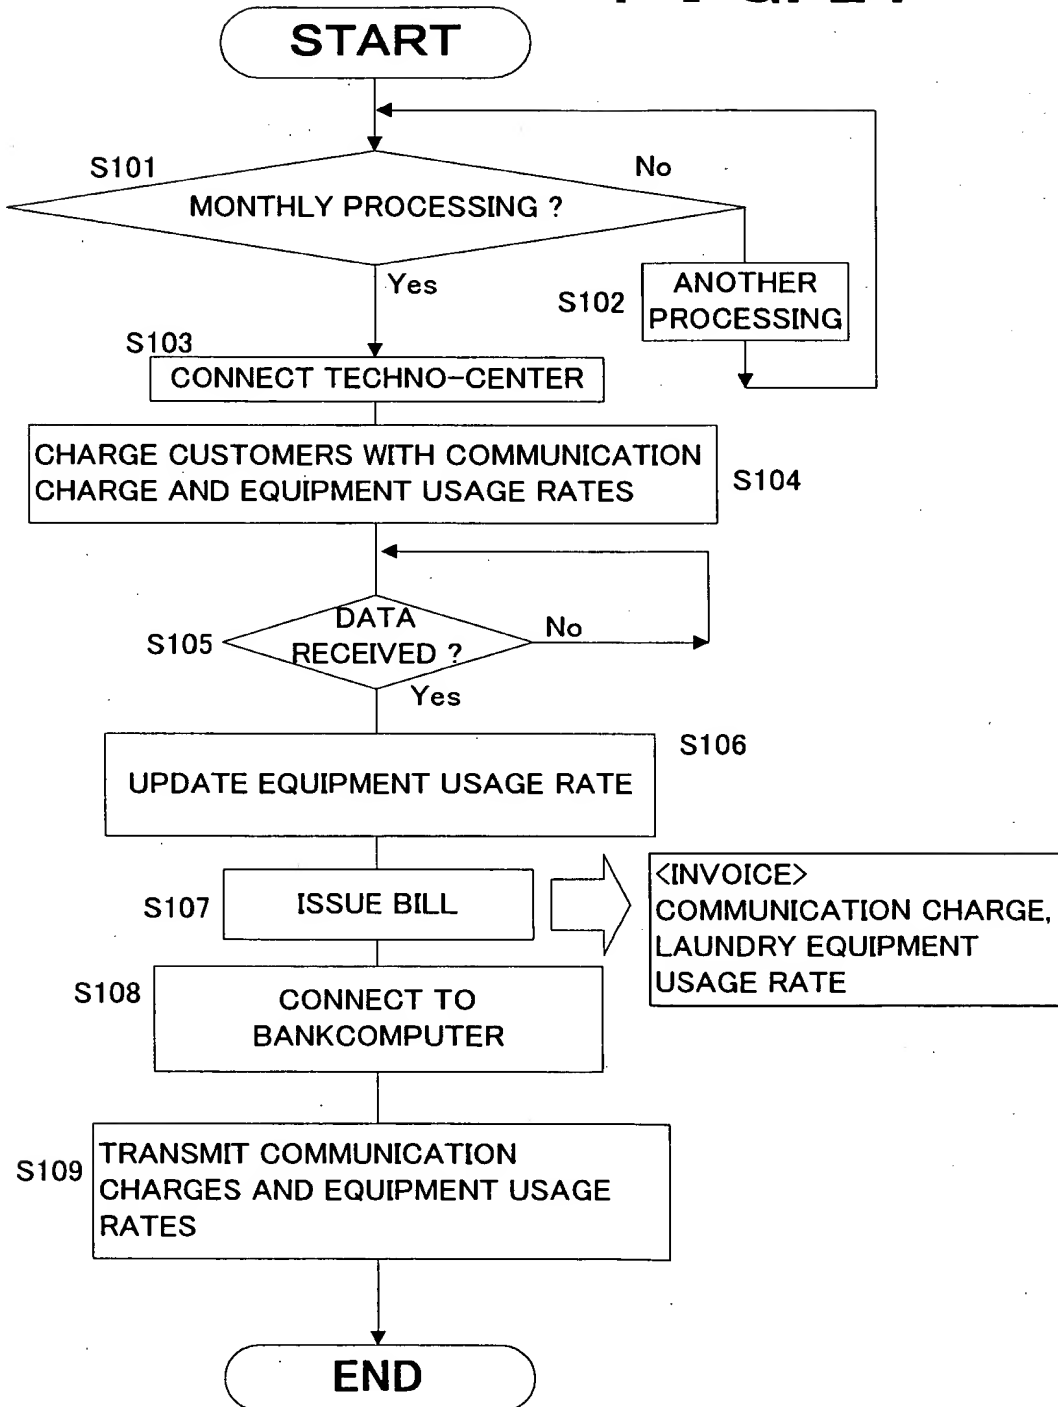 


FIG. 25

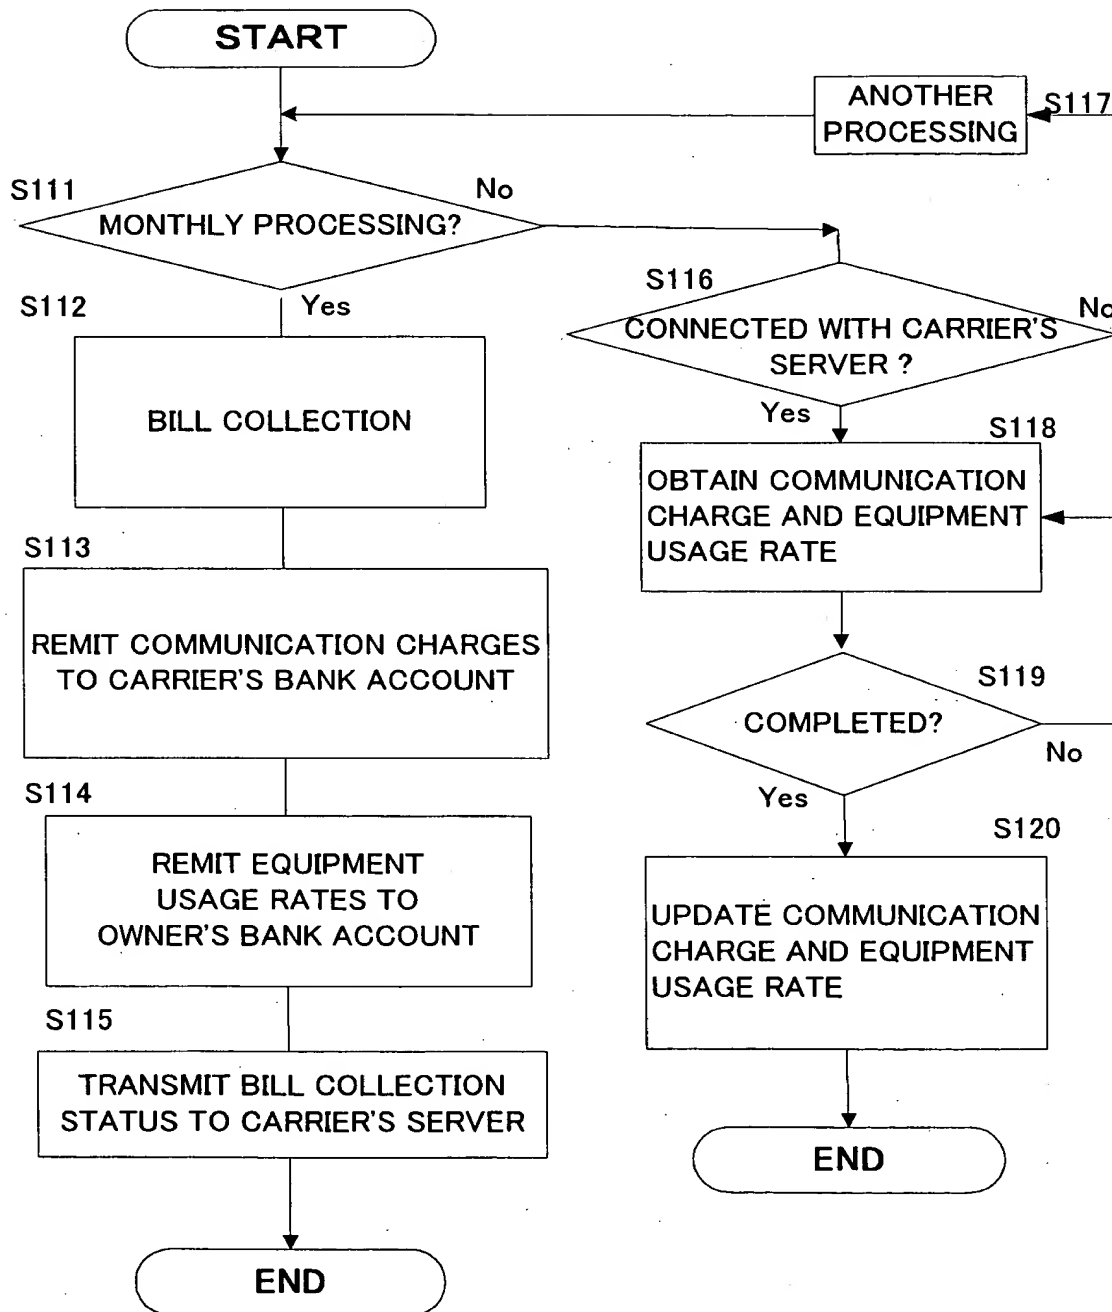 


FIG. 25


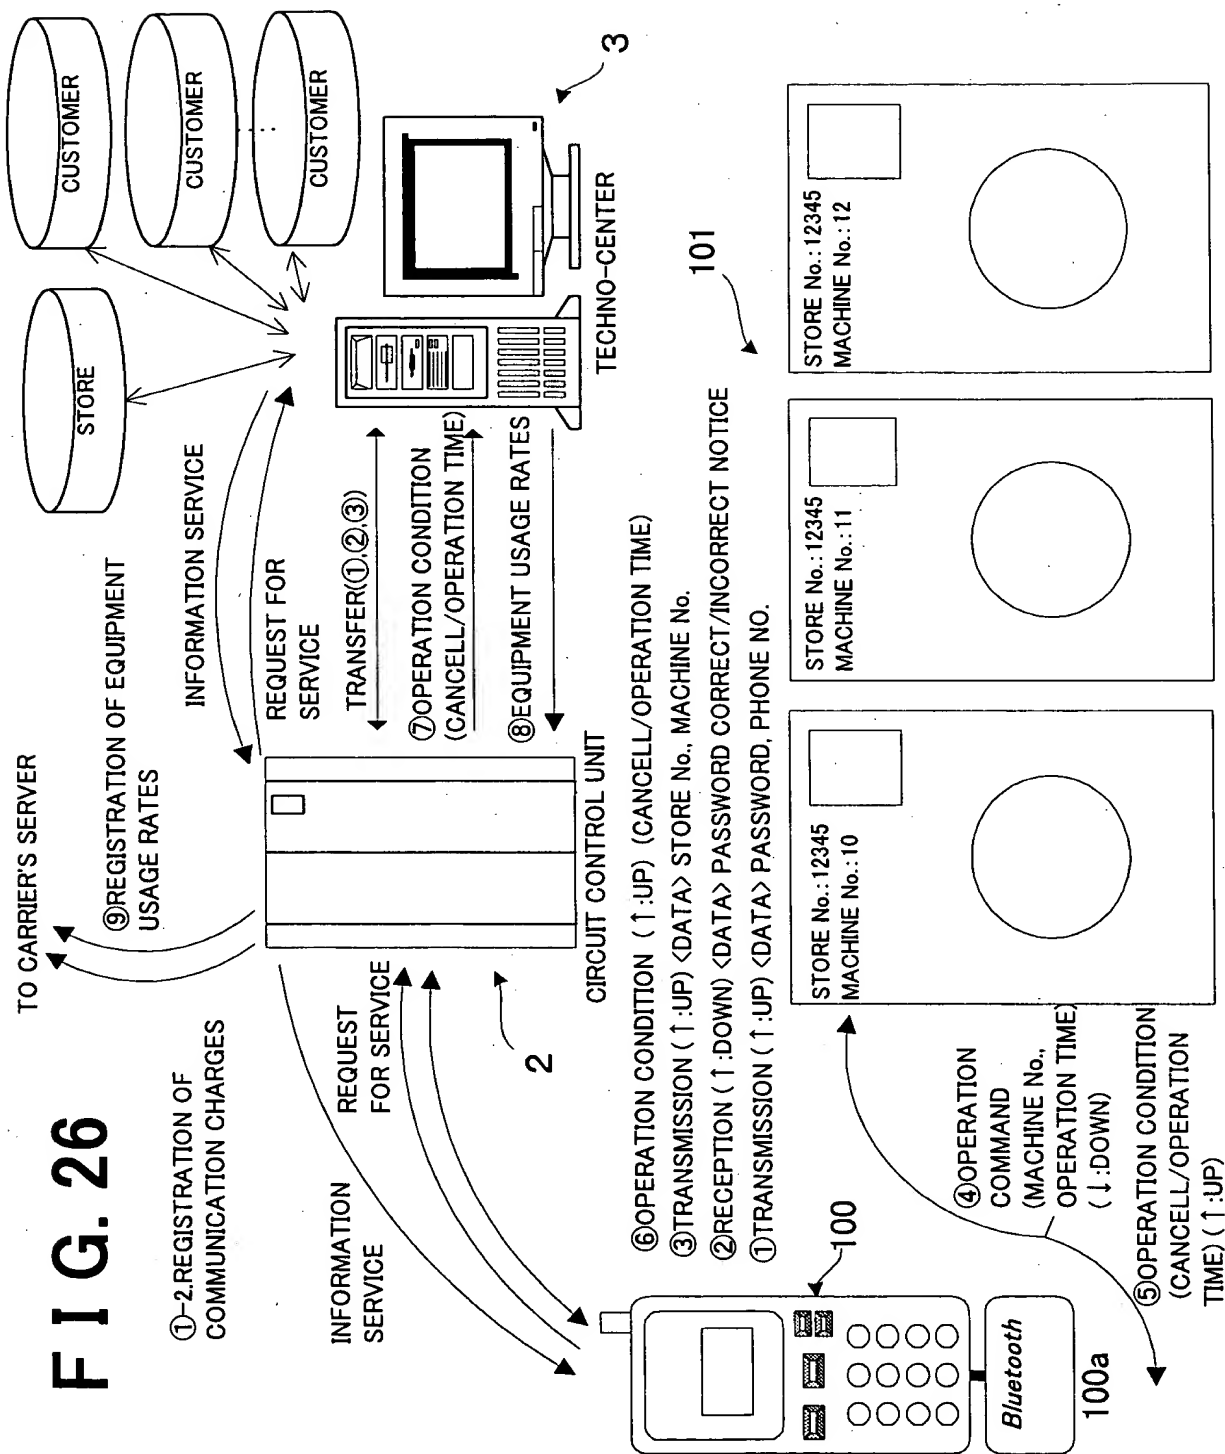 



FIG. 27

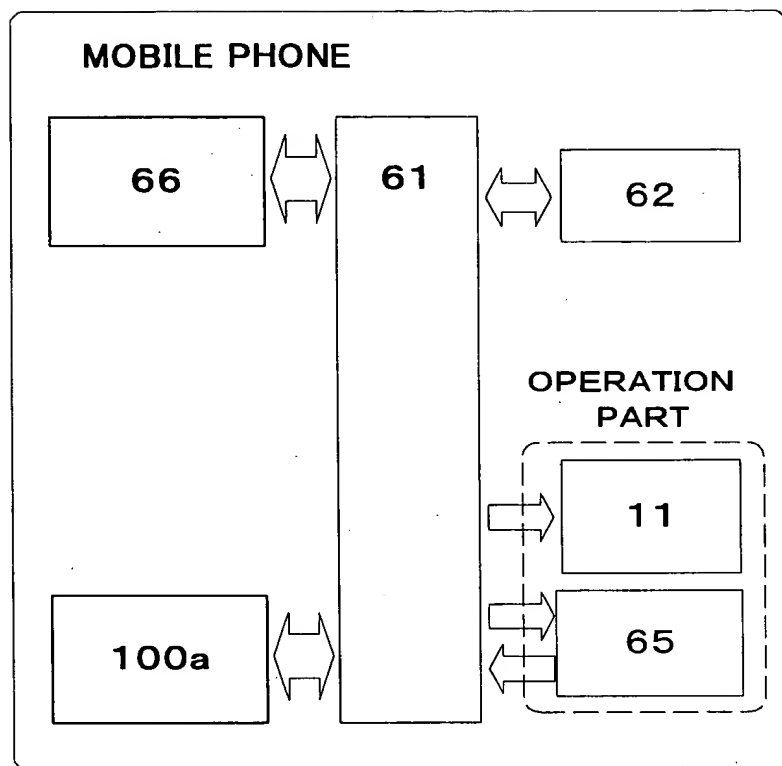 

**CIRCUIT ARRANGEMENT OF
MOBILE PHONE**


FIG. 27

 FIG. 28

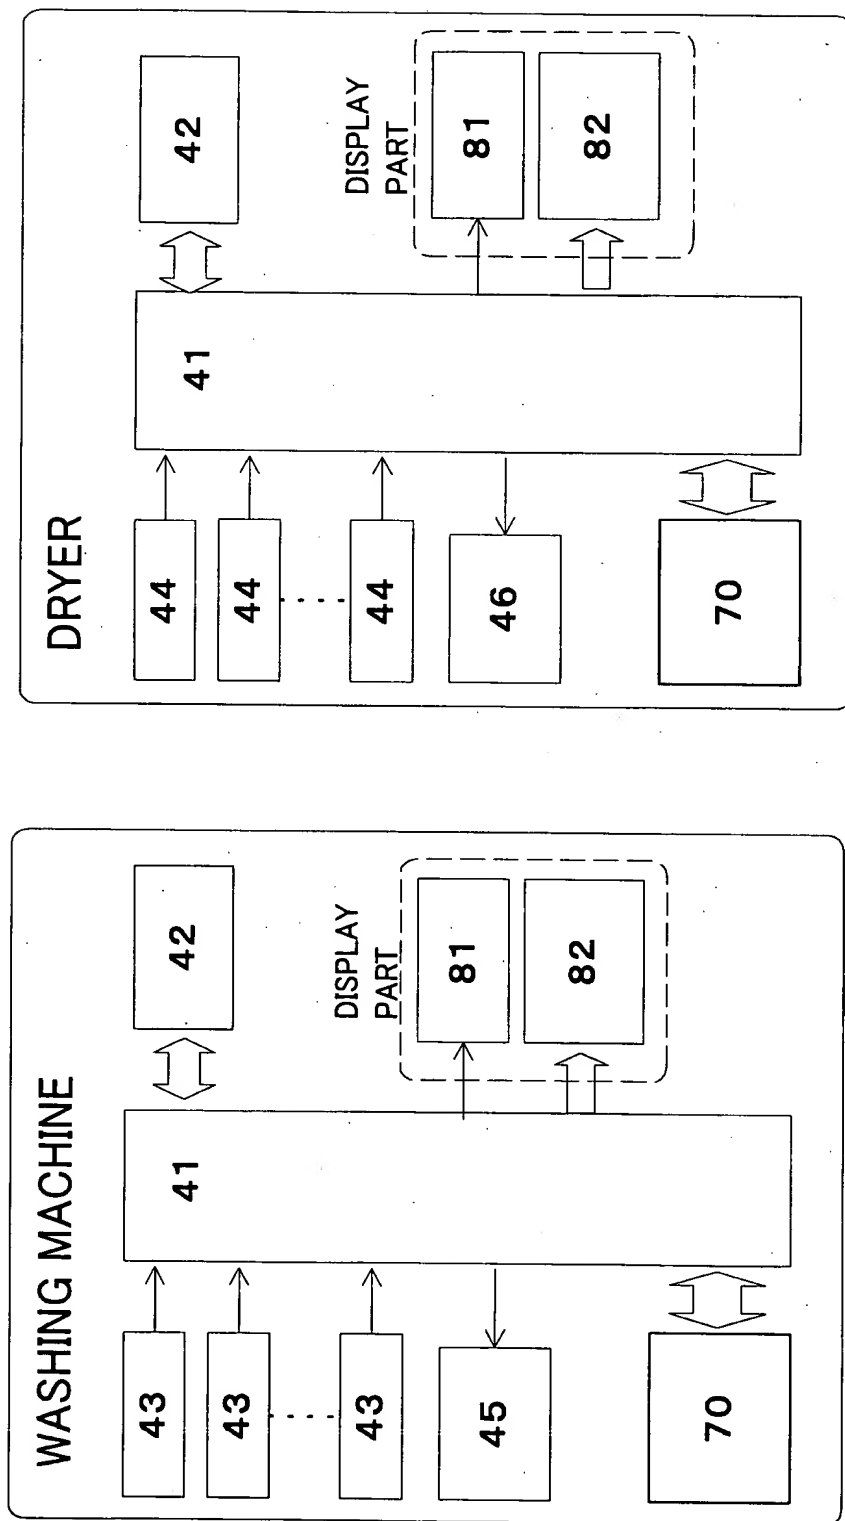

CIRCUIT ARRANGEMENT OF LAUNDRY STORE

 FIG. 29

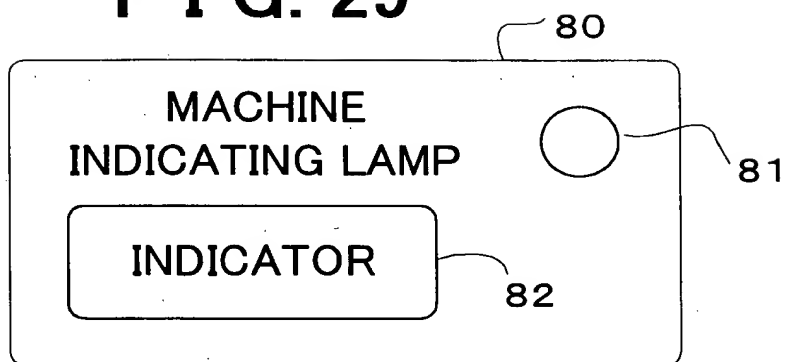

**MACHINE OPERATION
PART**

F I G. 30

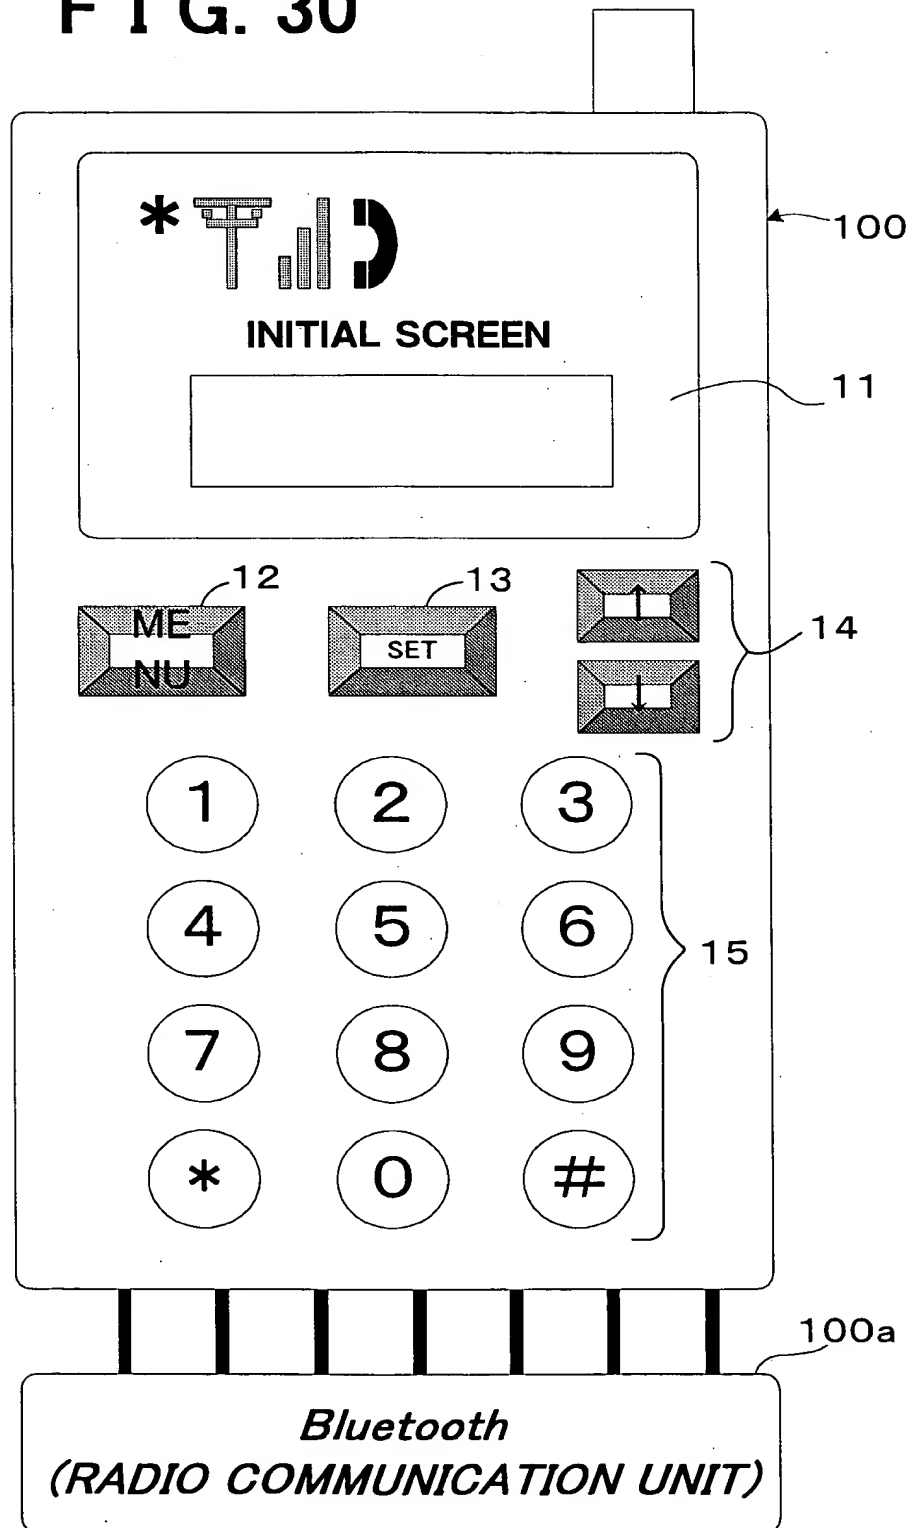 


FIG. 31


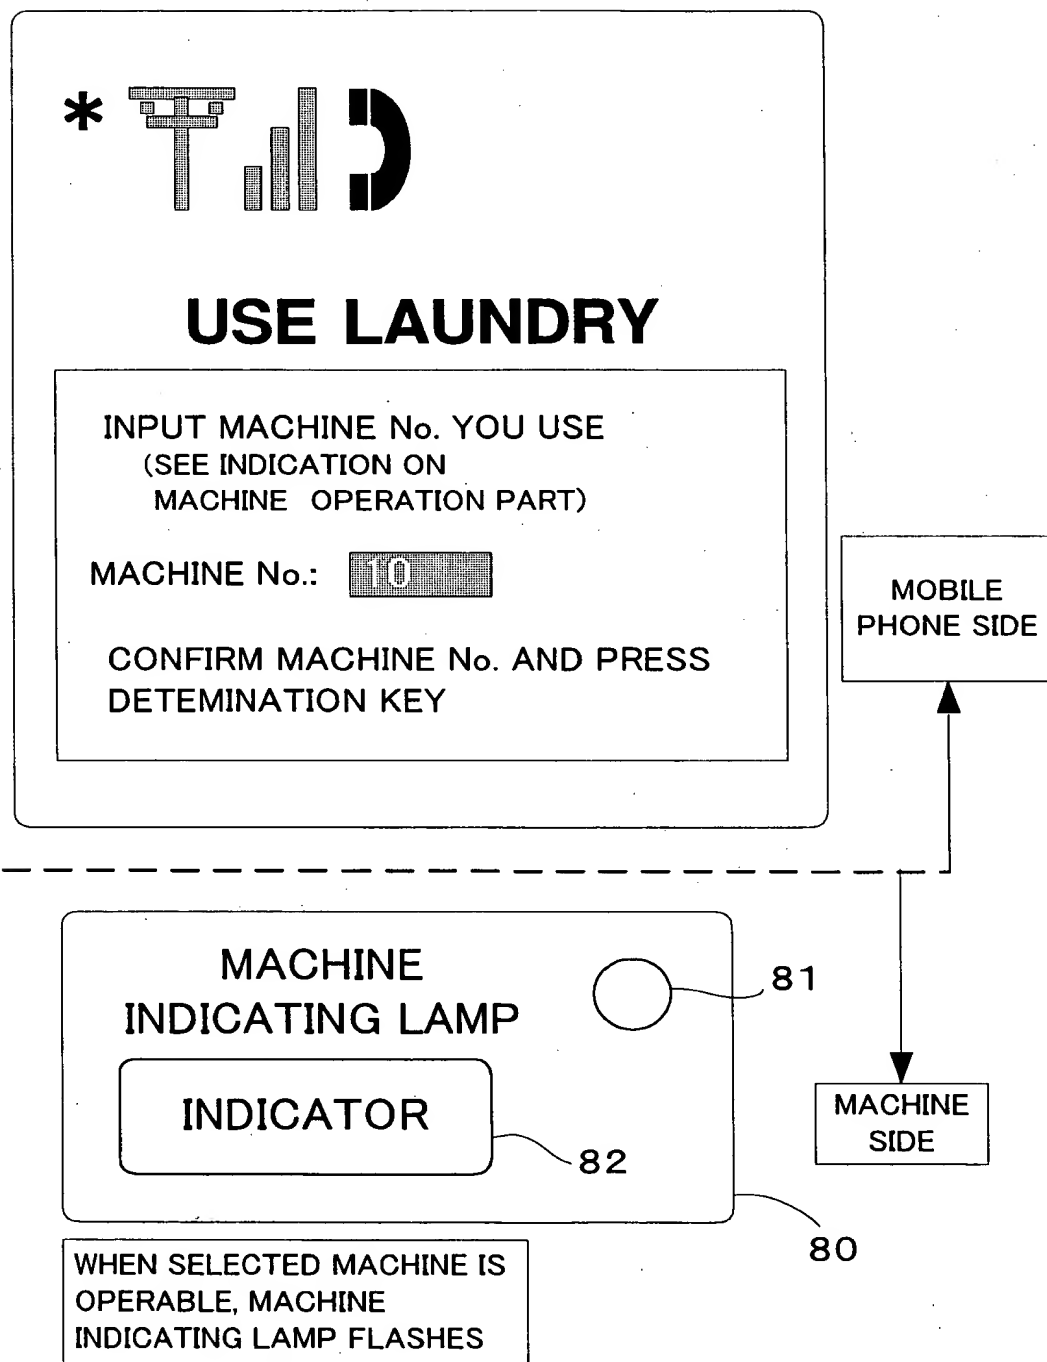 


FIG. 32

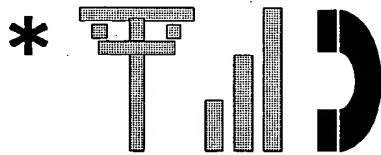 

USE LAUNDRY

LOAD YOUR LAUNDRY WHEN
MACHINE INDICATING LAMP STARTS
FLASHING

INPUT OPERATION TIME BY
NUMERIC KEYS, AND PRESS
DETERMINATION KEY TO START

OPERATION TIME: 123 MIN.

MOBILE
PHONE SIDE

MACHINE
INDICATING LAMP

DRYING TIME :
123 MIN.

MACHINE SIDE

MACHINE INDICATING LAMP IS TURNED
OFF. OPERATION IS STARTED.
REMAINING TIME IS DISPLAYED.

FIG. 33

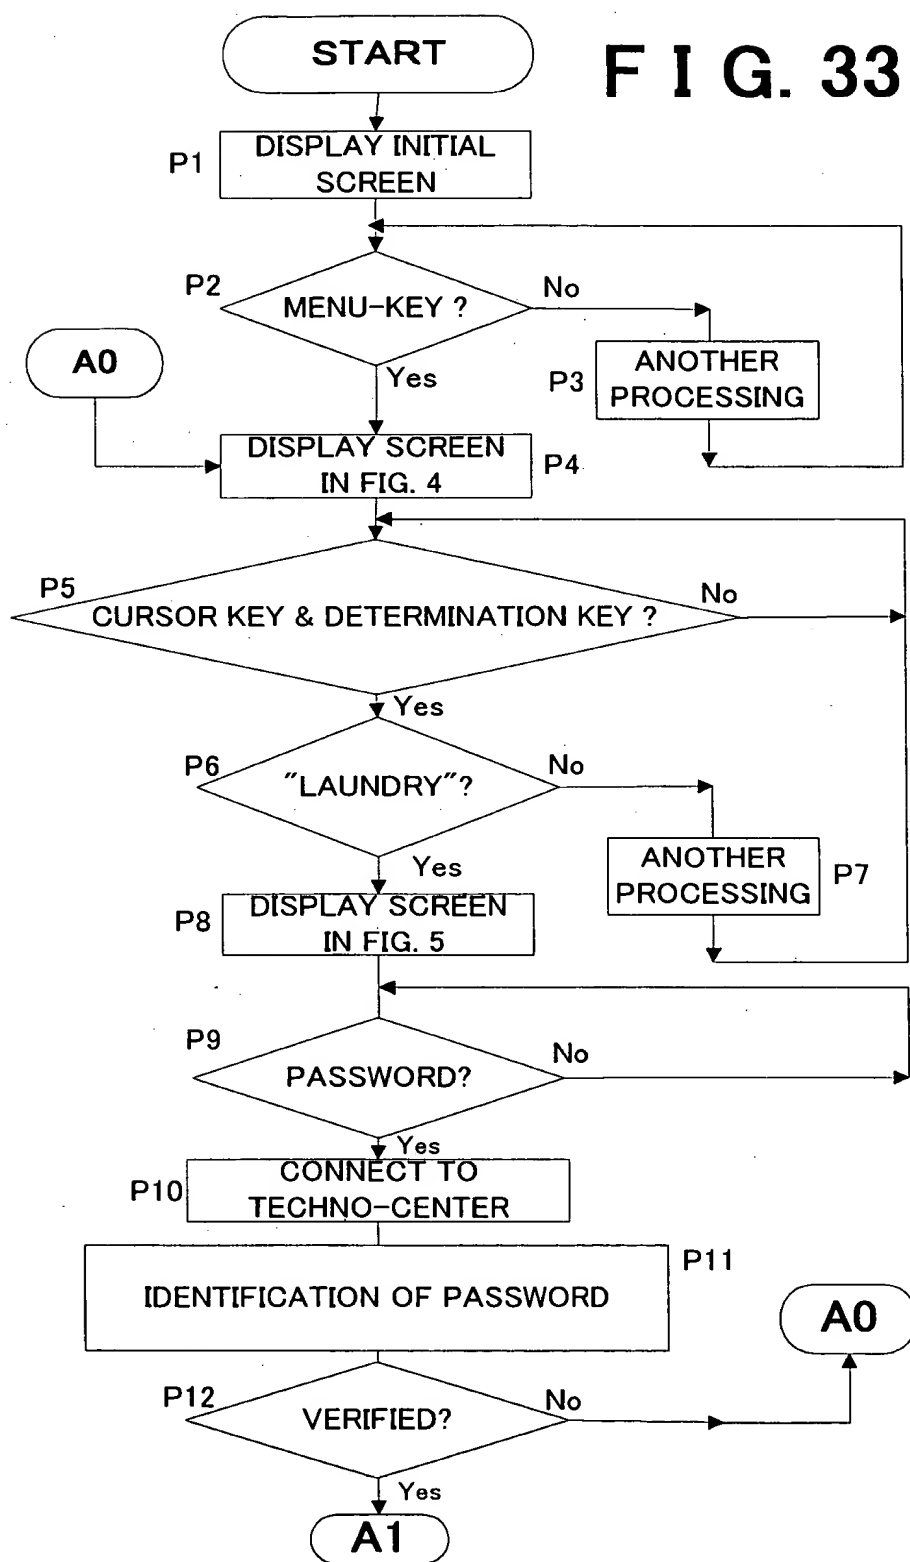 


FIG. 34A



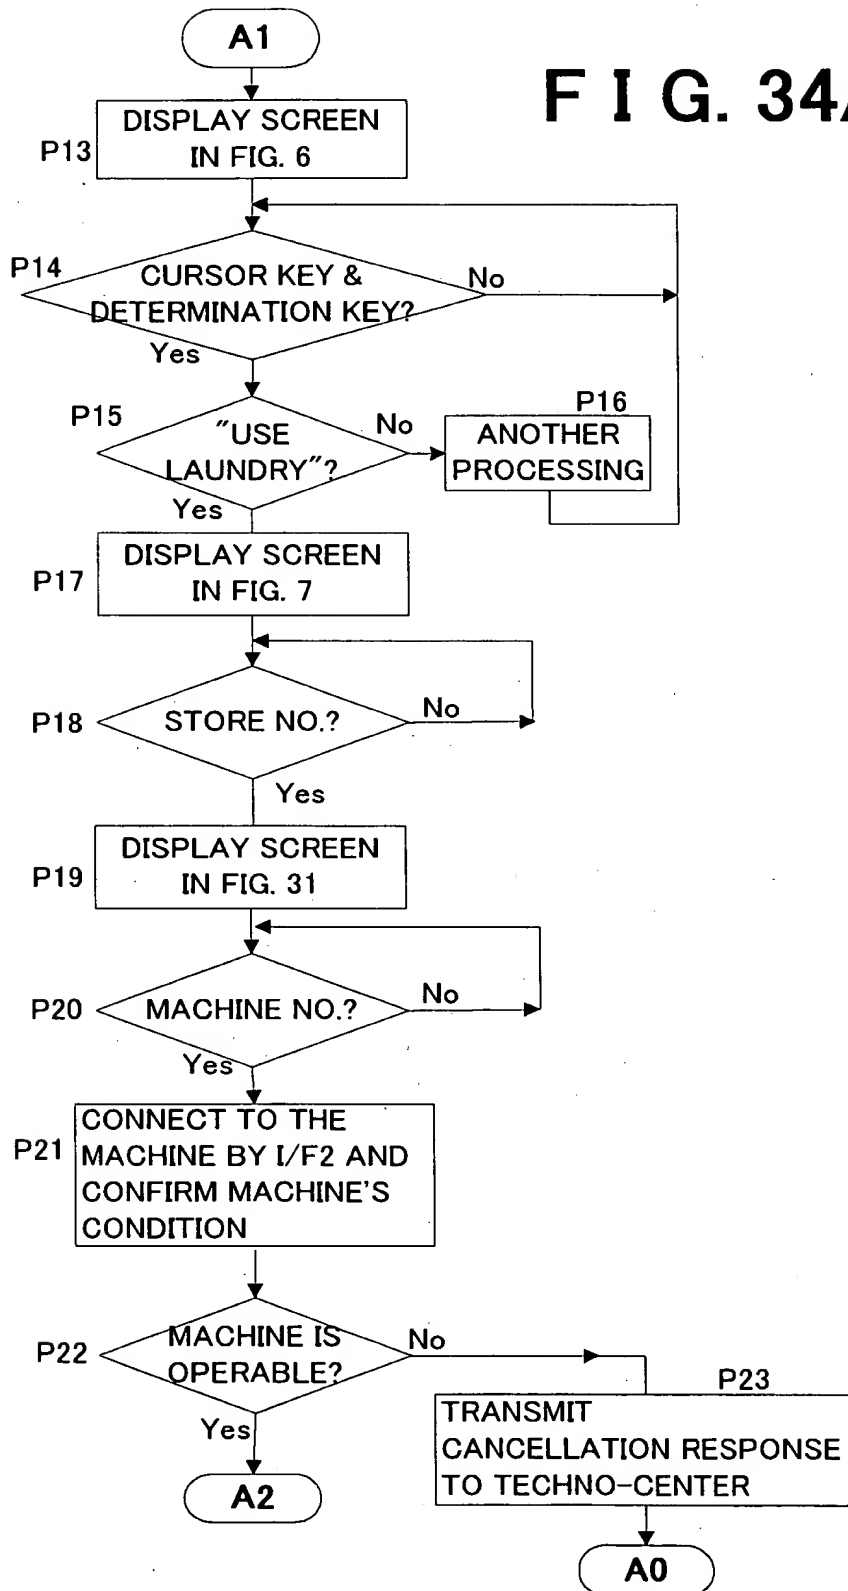 


FIG. 34B

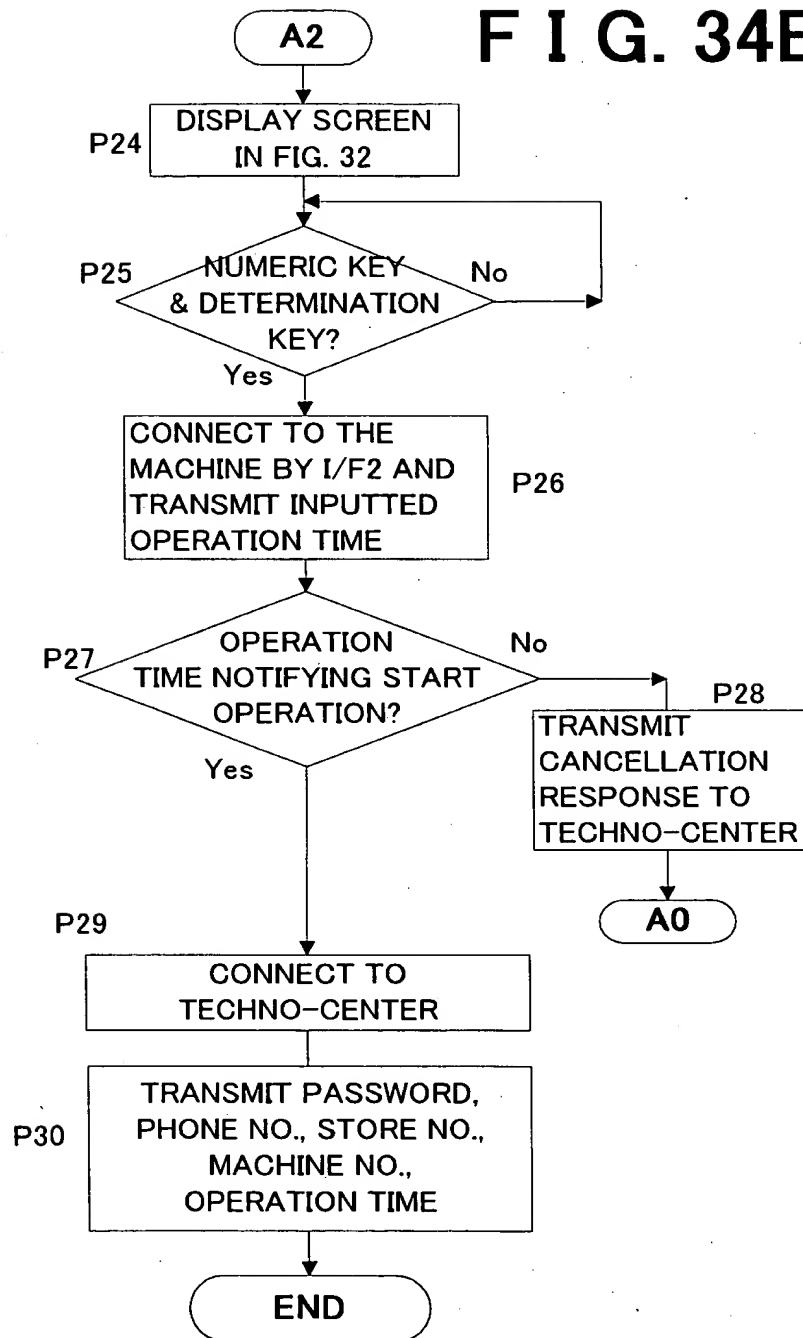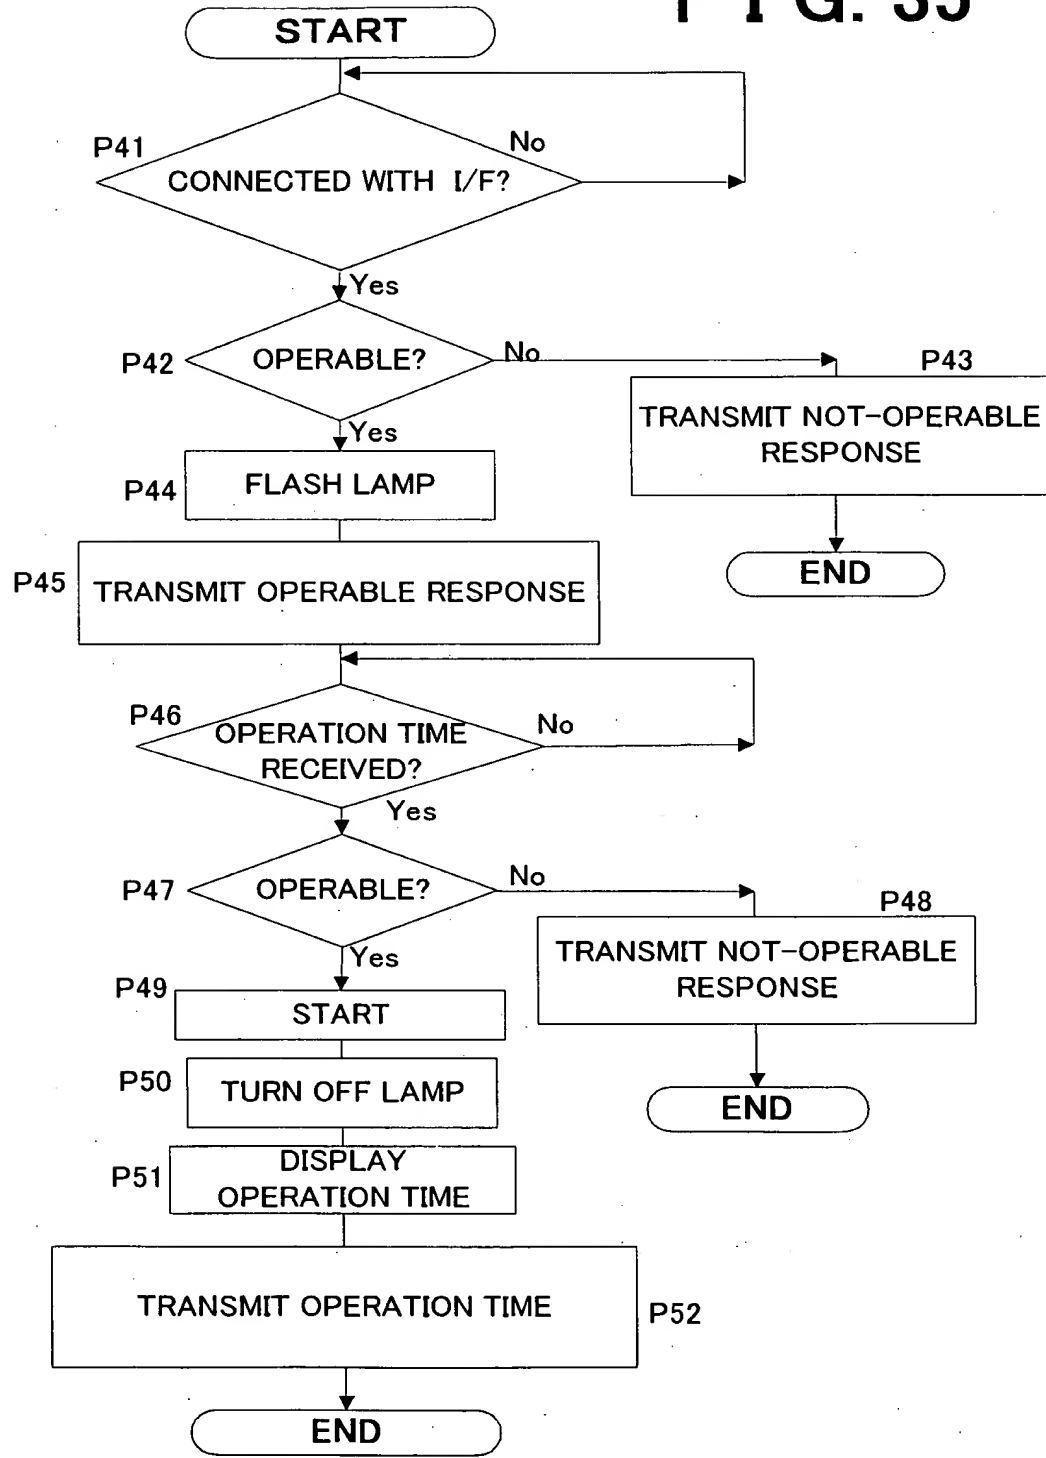 

00000-00000

FIG. 35

 

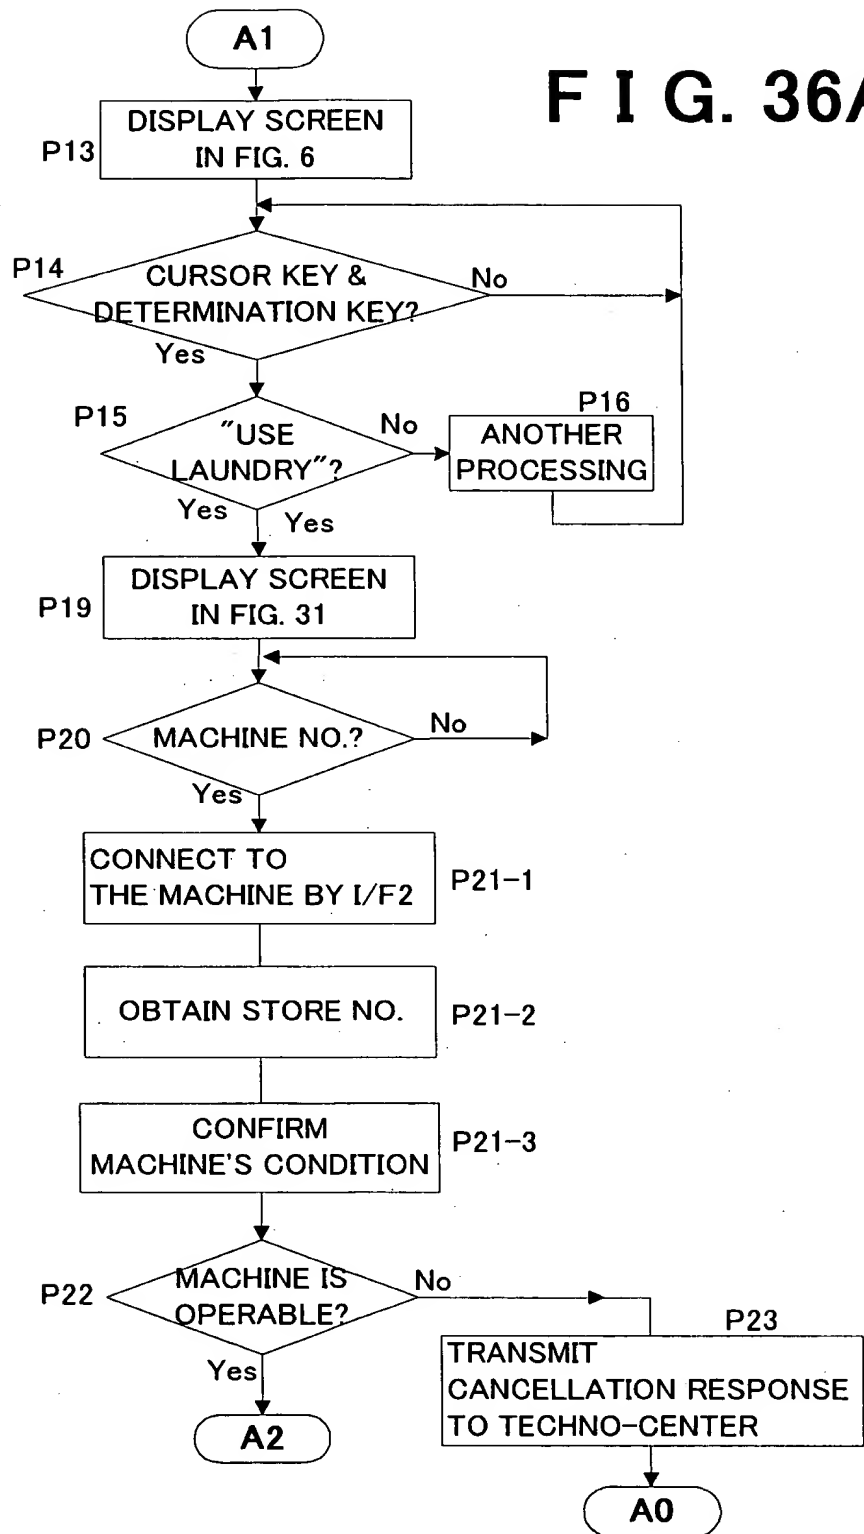 


FIG. 36B

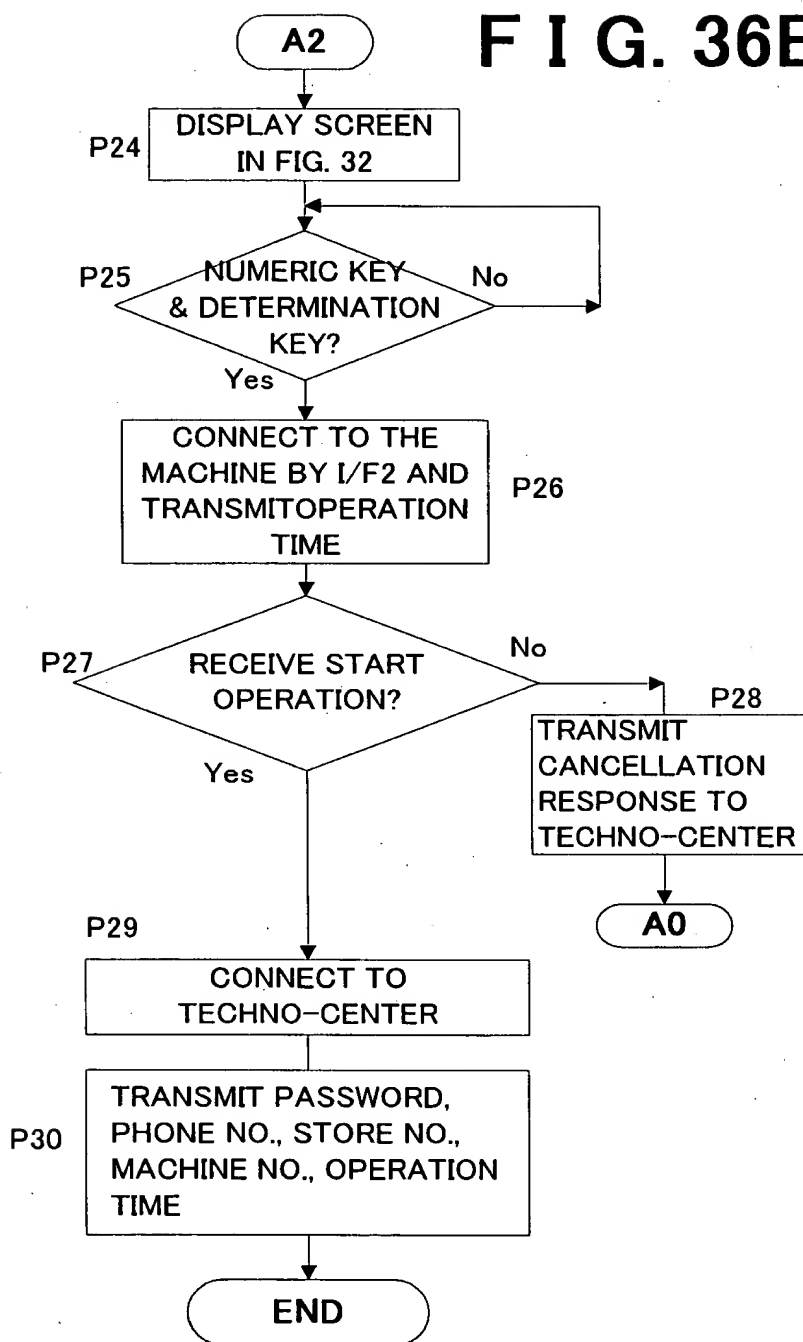 


FIG. 37

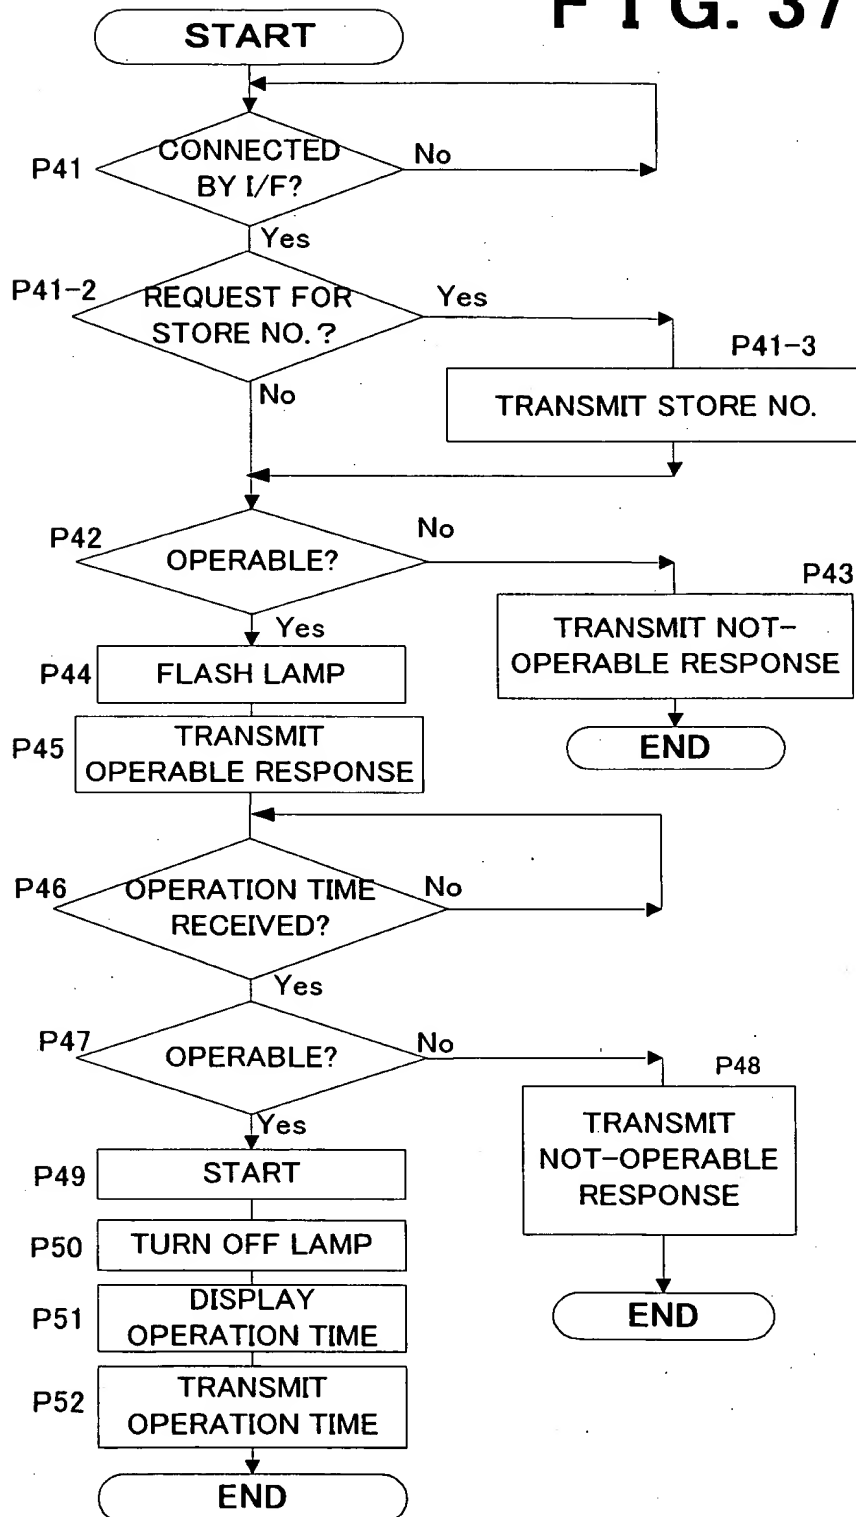 


FIG. 38

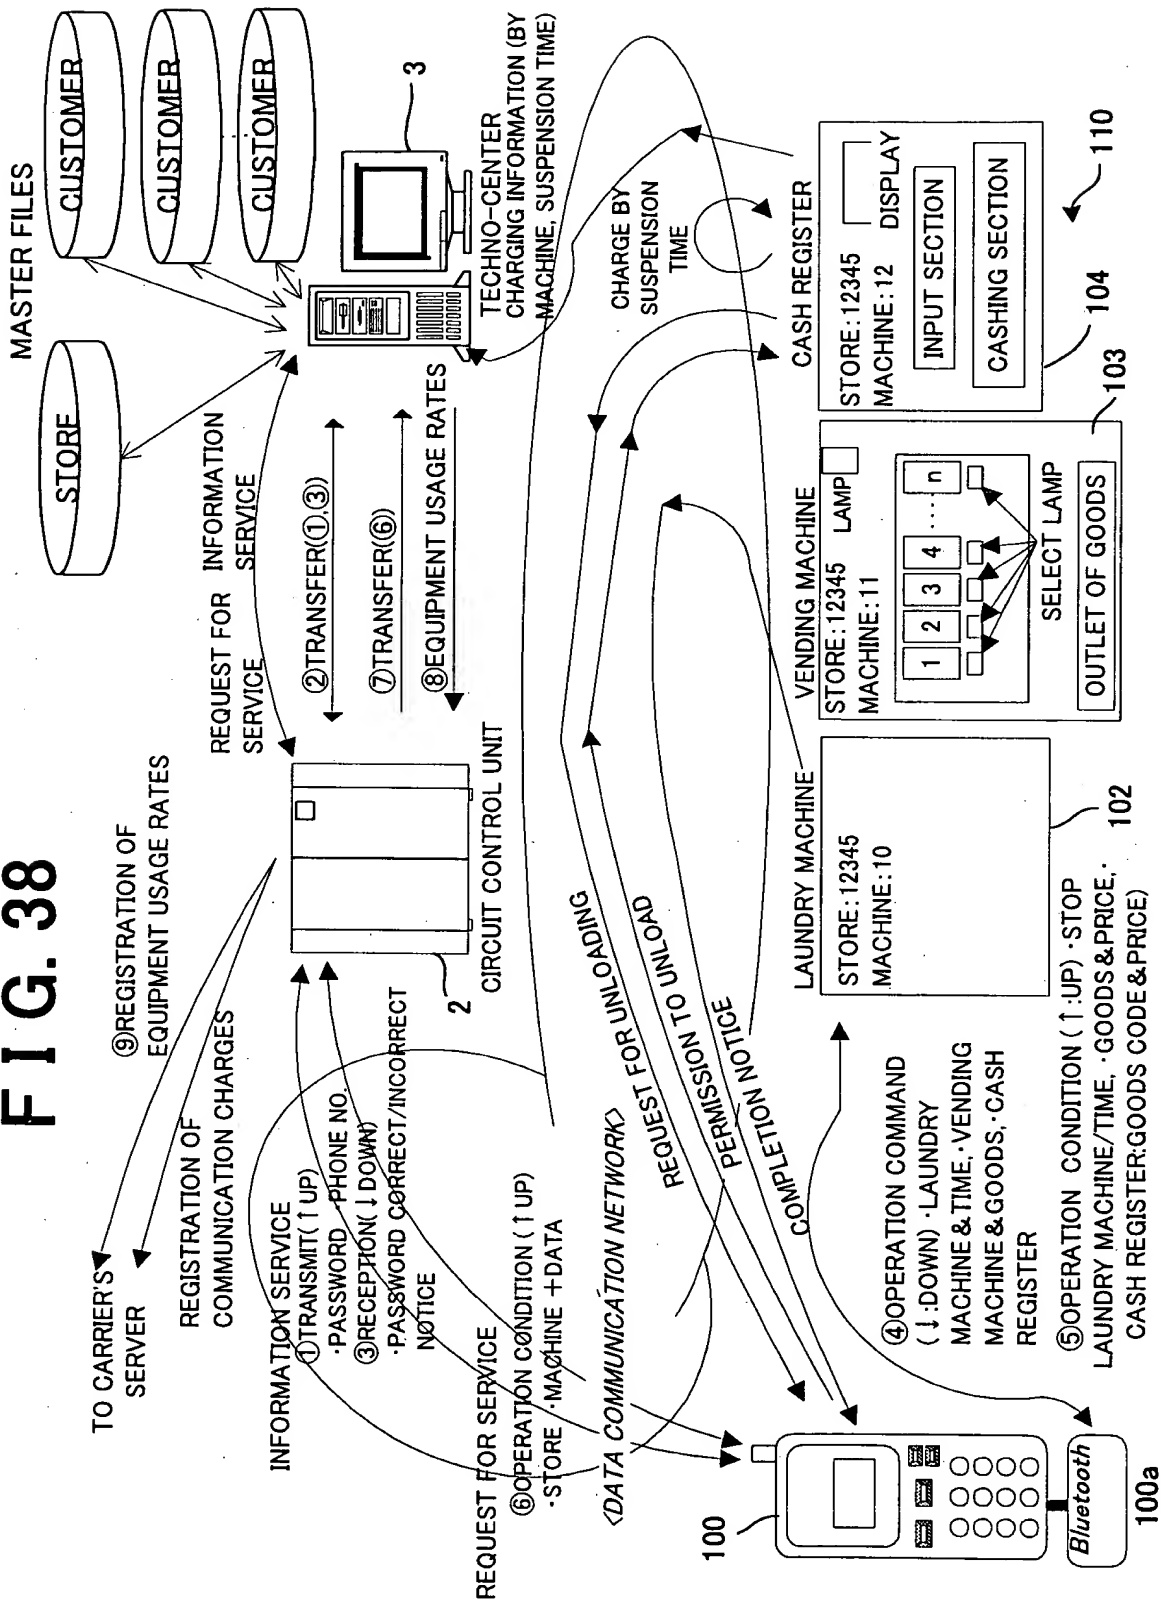 


FIG. 39


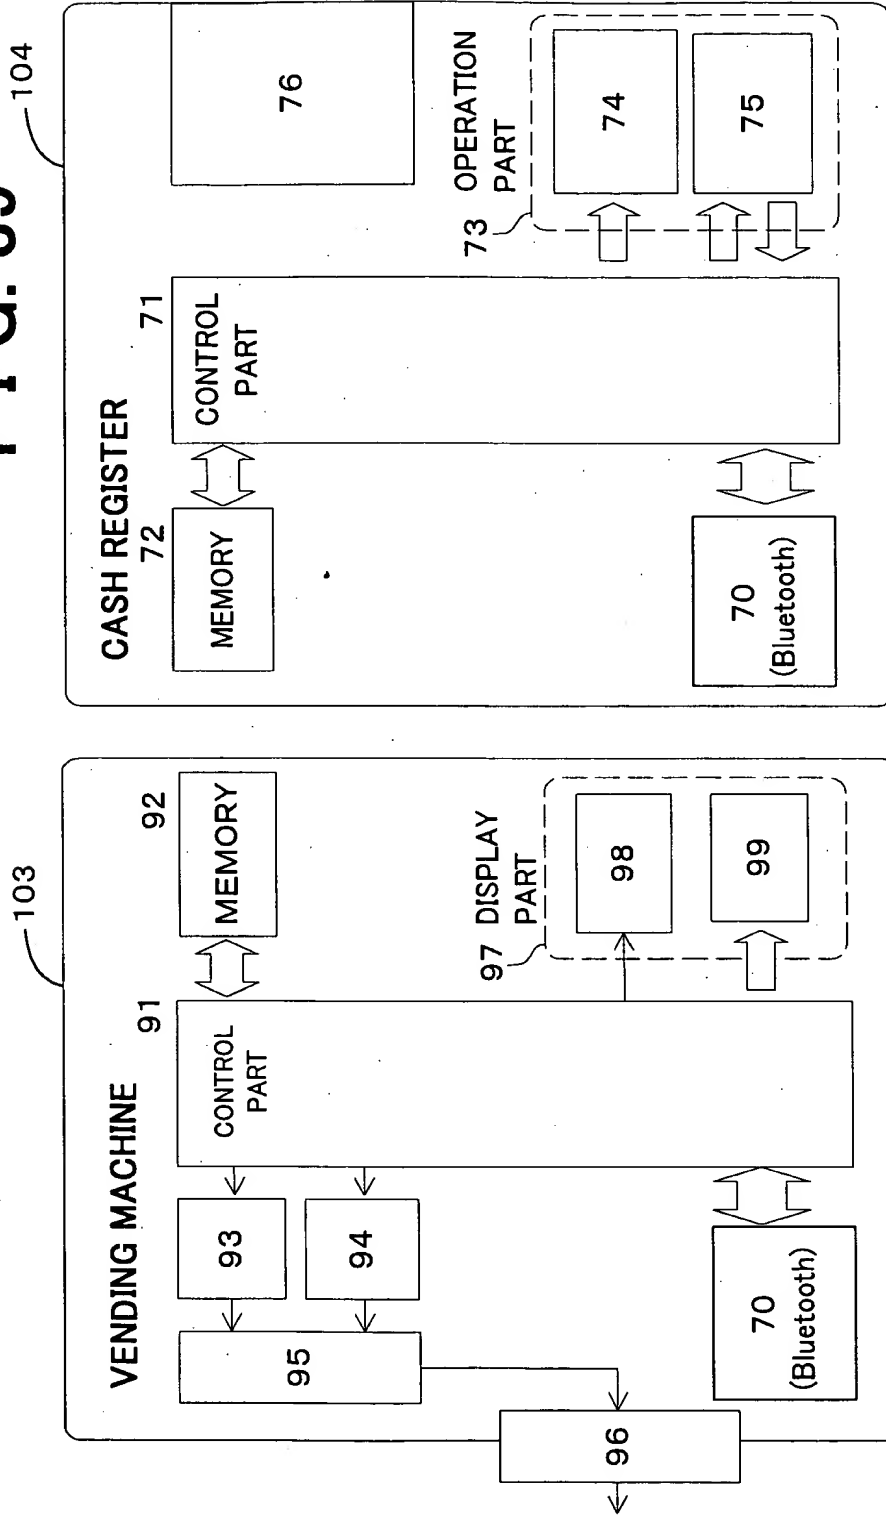 



FIG. 40

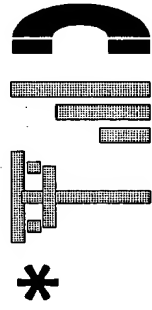 

USE LAUNDRY

WASHING COMPLETED

 FIG. 41

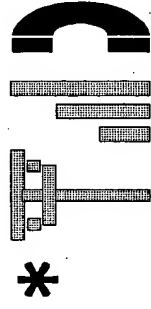


USE LAUNDRY

10 MIN PASSED AFTER
WASHING COMPLETION.
IF LEAVING, COST YOU ¥10 PER
10MIN FROM NOW ON.
GIVE US PERMISSION TO
UNLOAD YOUR LAUNDRY.

1. PERMIT (UNLOAD IT)

2. NOT PERMIT (LEAVE IT)

 FIG. 42A FIG. 42B FIG. 42C FIG. 42D

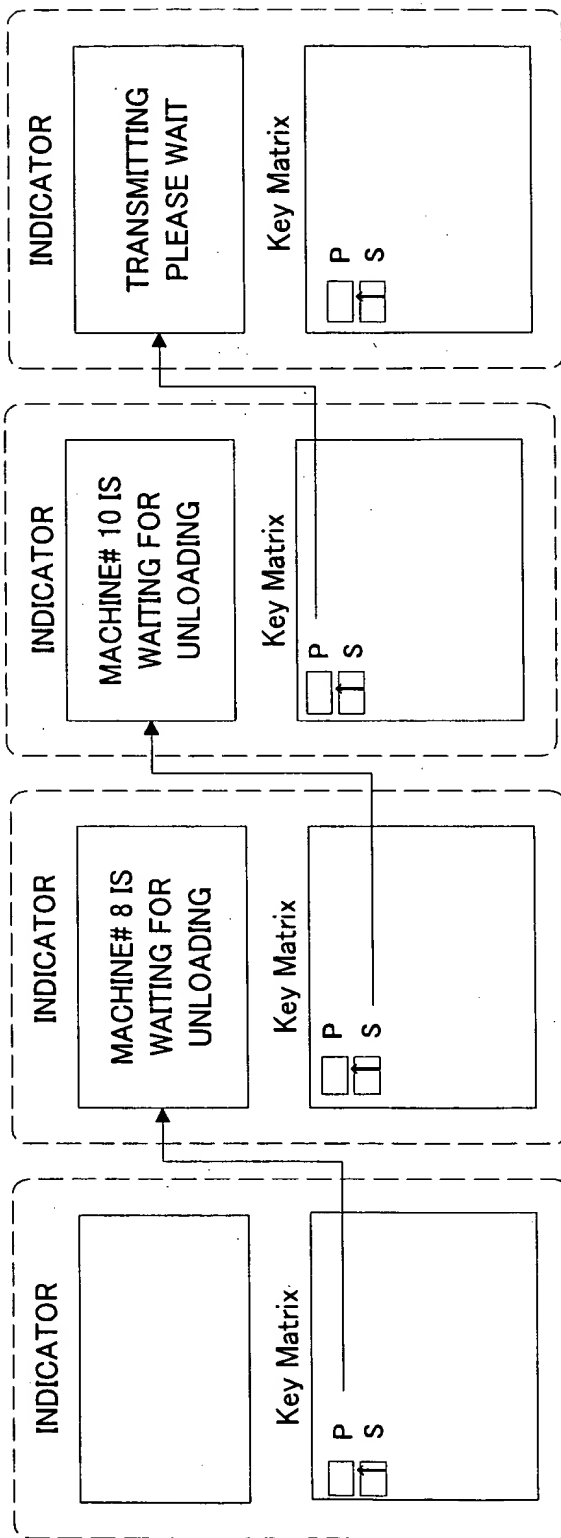

P = UNLOAD PERMISSION KEY

S = MACHINE SELECTION KEY

FIG. 43A

| INDICATOR |
|---|
| MACHINE NO.10 OBTAINED PERMISSION |
| Key Matrix |
| <input type="checkbox"/> REQUEST FOR UNLOADING <input type="checkbox"/> MACHINE SELECT |

FIG. 43B

| INDICATOR |
|---|
| MACHINE NO. 10 OBTAINED NO PERMISSION |
| Key Matrix |
| <input type="checkbox"/> REQUEST FOR UNLOADING <input type="checkbox"/> MACHINE SELECT |

F I G. 45

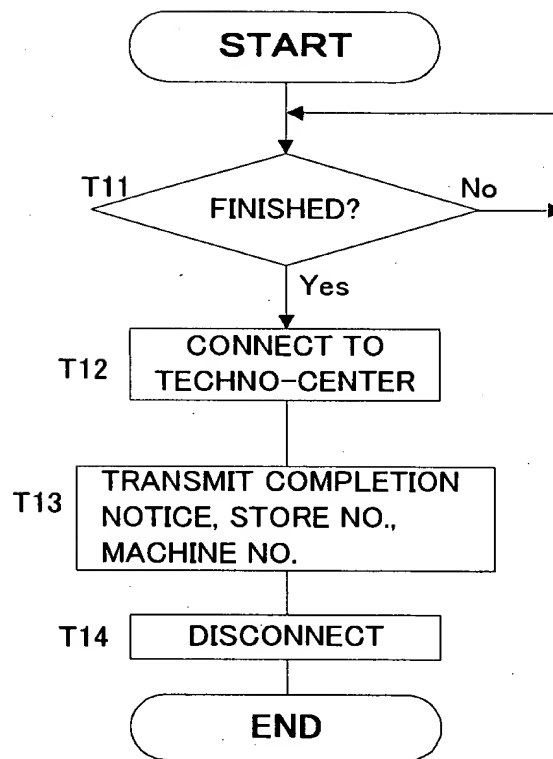 


FIG. 46


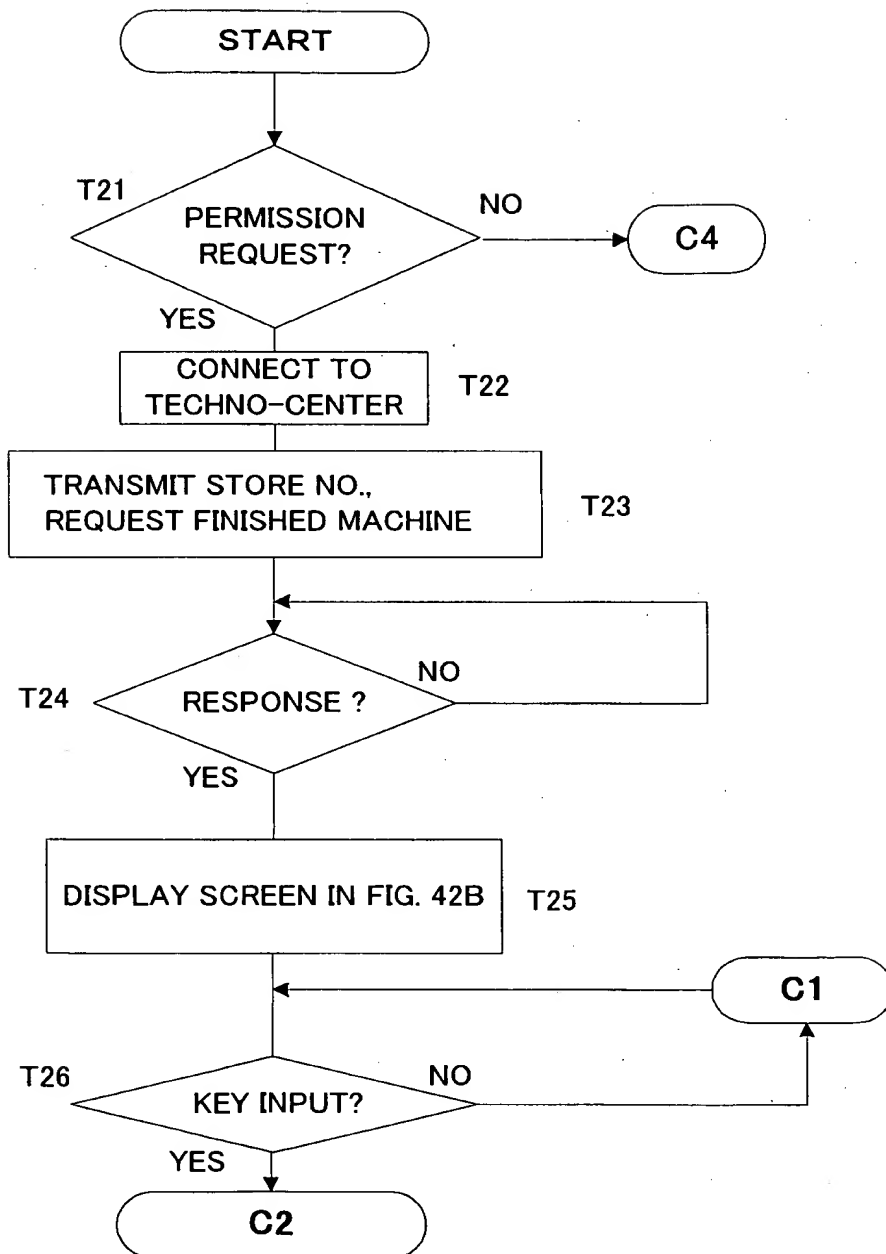 


FIG. 47

 

[illegible]

CASH REGISTER CONTROL PROGRAM MANAGING TABLE

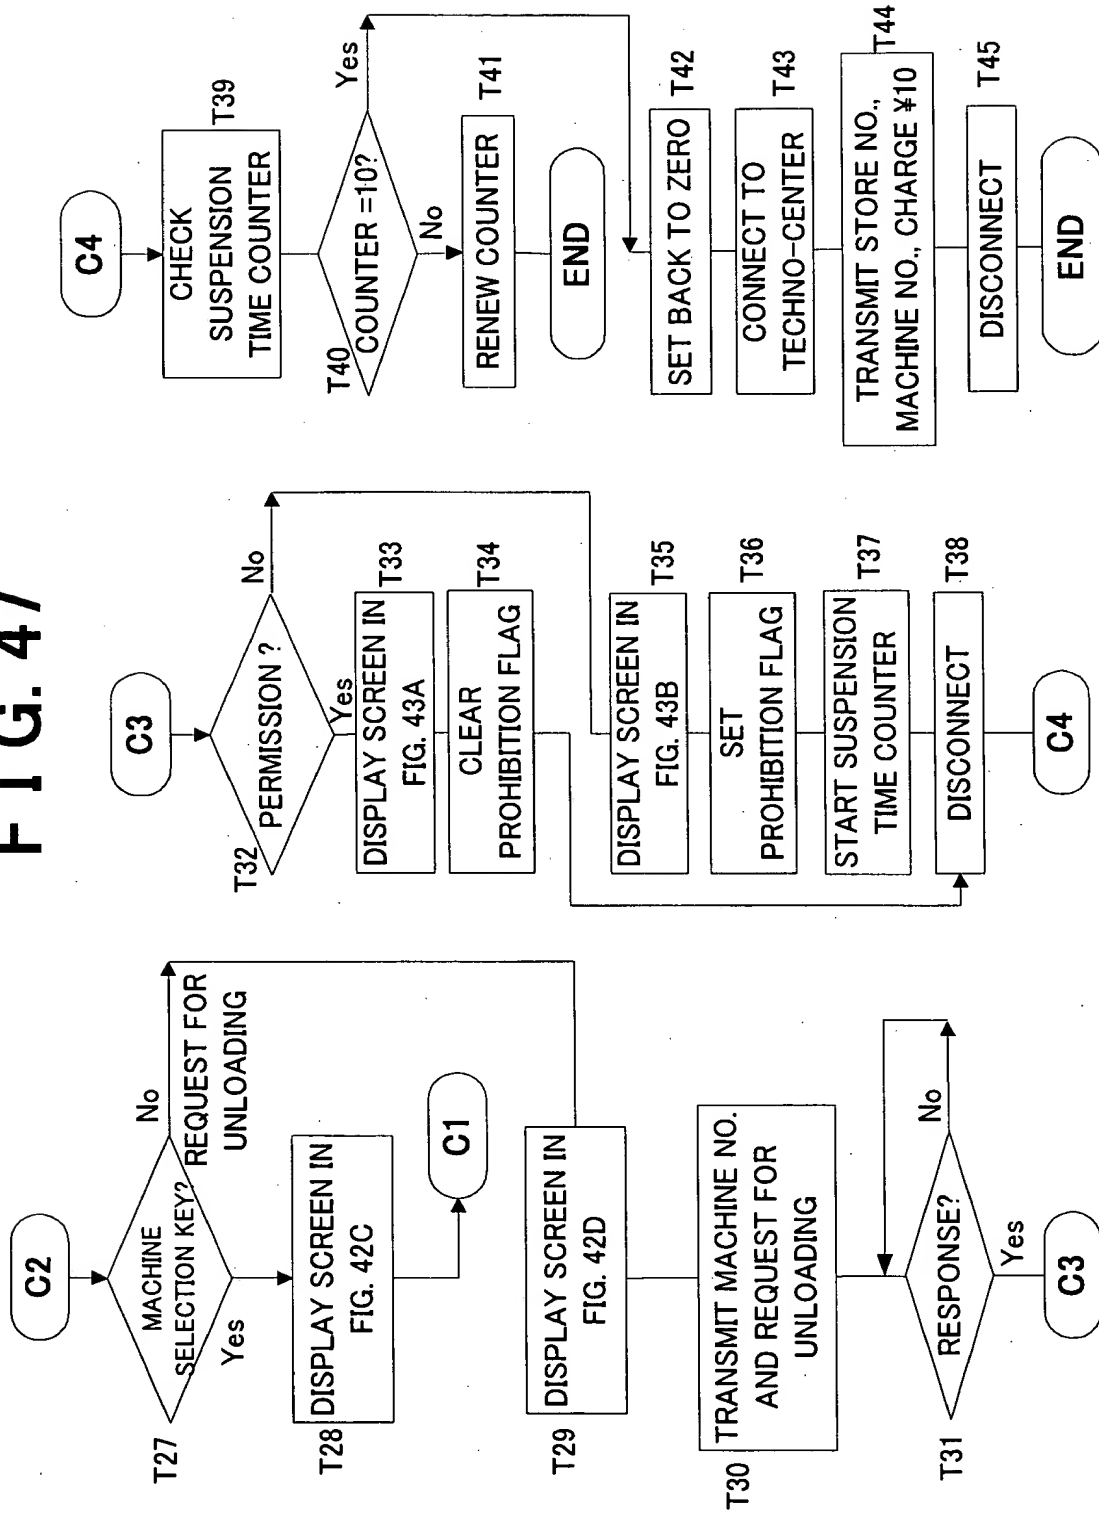